
Laser Power Supplies DT 400 Operating Manual



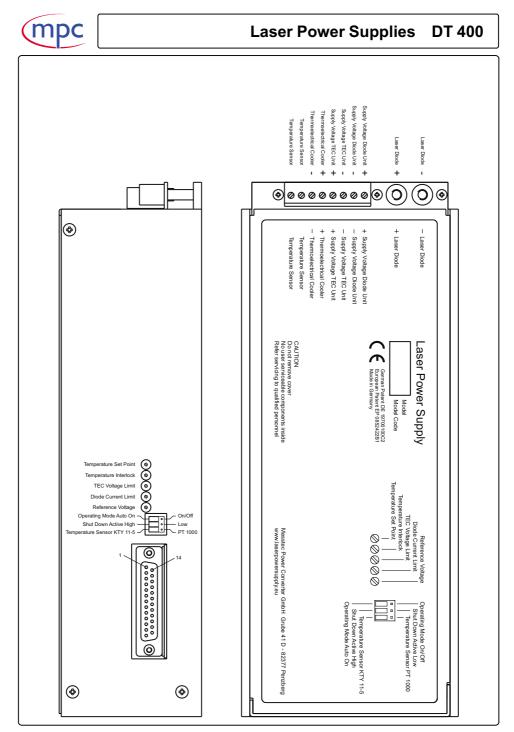

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Index of contents	Page
Safety instructions	. 3
DT 400 Description	. 4 - 6
DT 400 - Specification	. 7 - 13
DT 400 - General Instructions	. 14 - 15
DT 400 - Applications 1 - 14	. 16 - 39
DT 400 - Terminals	. 40
DT 400 - Dimensions	. 41
Control Panels	. 42 - 46
Interlock Unit	. 47 - 50
Control Interface - General Information	. 51 -55
Control Interface - Control Port	. 56 - 59
Control Interface - RS 232 Port	. 60 - 96
Control Interface - System Software - Set Up	61 -64
Control Interface - System Software - RS 232 Control	. 65
Control Interface - System Software - RS 232 Software Protocol	. 66 - 96
Ordering Information	. 97

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Safety Instructions

The DT 400 is suitable for supplying laser diodes with a constant current and for supplying peltier elements with a constant voltage.

The device is not suitabel for supplying loads which generate a electromotive force of more than 30 V.

The lines for the supply voltage must have a cross-section of 2.5 qmm, use sleeves. The lines for the peltier elements must have a cross-section of 1.5 qmm, use sleeves. The lines for the laser diodes must have a cross-section of 6 qmm, use ring terminals. Do not use a crimping tool which does not fit. This increases transition resistance and may cause a cable fire.

In any case of doubtful crimping, additional soldering is required. Take care that the ring terminals are free of solder at the screws and at the connection bolts.

Use galvanized screws M5 x 8 and galvanized spring washers M5.

Take care of correct input wiring, the device has no inverse-polarity protection. Wrong polarity may damage the device.

Take care of correct wiring of the laser diodes. Wrong polarity will damage the diodes.

Never disconnect the output lines for the laser diodes during operating. This may generate a dangerous electric arc which can lead to skin burns or to fire.

The DT 400 is cooled by a fan. Air is drawn in at the front side near the terminals and is blown out at the rear side.

In an industrial environment with conductive dust, air filtering is required.

Put the device out of operation if it has visible damages or if it doesn't work properly.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Description


The DT 400 is a high-precision laser diode driver and a full bridge TEC driver with temperature controller and control logic utilizing Messtec's patented power switch technology. This technology has a lot of advantages and is particularly suited for driving laser diodes. It offers high accuracy and current stability, a excellent dynamic performance, a high output impedance and low electromagnetic interference.

No current overschoot or ringing arise when altering output current or load impedance abruptly.

Overshooting and ringing is very dangerous for laser diodes and it is the most dreaded thing in operating expensive laser diodes.

Fig. 1 shows the step response of a conventional laser driver at a curent set point step of $0 \dots 100$ %. There is excessive overcurrent and ringing which may damage the laser diodes.

Fig. 2 shows the step response of the DT 400 at a current set point step of 0 ... 100 %, there is no overshoot or ringing, the characteristic is nearly perfect.

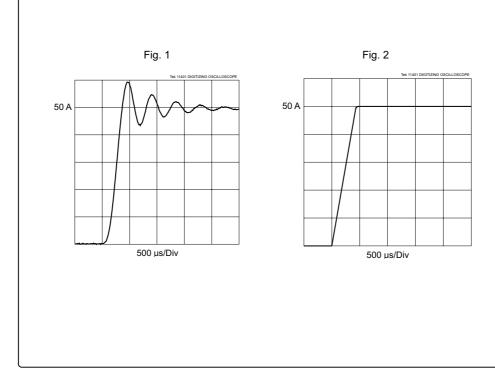

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

A further major property is the dynamic output impedance which has significant effects to the diode current if load impedance alters abruptly.


For example if there is a loose contact at the output lines and the output is open circuit, the drivers output voltage will increase to its maximum value because of its characteristic to inject current. If the contact will be closed and you have a conventional laser driver with low dynamic output impedance, excessive overcurrent will damage the laser diodes.

The same happens, if you have stacked diodes and one of its emitters will getting short circuit. The load impedance will alter abruptly at this moment and excessive overcurrent will damage the complete stack.

Different from a convential laser driver, the DT 400 responds in this case absolutely reliable and no overcurrent occures.

Fig. 3 shows the response of a convential laser diode driver at a nominal output current of 50 A, if load impedance is changed abruptly to lower values.

Fig. 4 shows the response of the DT 400 at the same conditions, the diode current keeps constant.

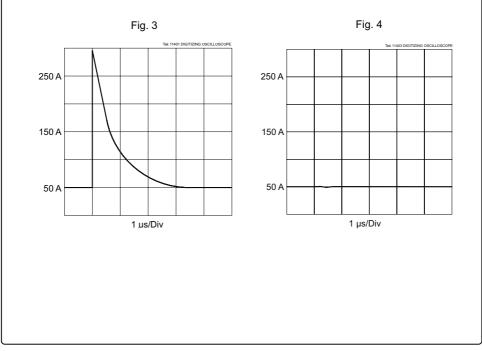

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

The DT 400 can drive laser diodes, Peltier elements or both. Two types of temperature sensors are supported, a KTY 11-5 and a PT 1000.

The DT 400 is available with an output current up to 50 A (DT 400-50) and with an output current up to 60 A (DT 400-60).

The DT 400 can be operated by a microcontroller, an external control logic or completely analog. Two operating modes are possible, mode Laser On/Off and mode Auto On. The mode can be selected by a jumper.

The device is well suited to build up simple laser systems with manual controlling, or complex laser systems with safety interlock, RS 232 interface and an industrial interface for controlling by a programmable logic controller.

For a simple laser system only a few external components are required: Two buttons for Laser On and Laser Off One potentiometer for the current set point Six LEDs for indicating current states No additional power supply is neccessary.

For the DT 400 a comprehensive range of accessories is available, like eight different types of control panels, a safety interlock unit and a control interface unit with an industrial interface and a RS 232 interface, which allows fully controlling and configuring the system.

The DT 400 is forced-air-cooled but it can also be cooled by mounting it horizontally at a water cooler.

Set up elements

Jumper for operating mode On/Off or Auto On Jumper for Shut Down mode active High or active Low Jumper for temperature sensor KTY 11-5 or PT 1000

Adjustment elements

- 10 turn potentiometer for reference voltage
- 10 turn potentiometer for diode current limit
- 10 turn potentiometer for TEC voltage limit
- 10 turn potentiometer for TEC temperature interlock
- 10 turn potentiometer for TEC temperature set point

Connectors

8-pole terminal clamp for a 15 \dots 30 V DC power supply, for the TEC ouput and for the temperature sensor

2 connection bolts Ø 10 mm with female thread M5 for the laser diodes 25-pole D-Sub female connector for control signals and status signals

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc	Laser F	Power Supplies DT 400
Specification		
Supply voltage diode unit Supply voltage TEC unit	15 30 V DC 15 30 V DC	20 A max 20 A max
Output Laser Diodes Diode current Diode current Accuracy Linearity Temperature stability	050 A 060 A ± 0.1 % ± 0.1 %	DT 400-50 DT 400-60
Rate of change Ripple current	± 50 ppm / °C 0.17 Α / μs 0.1 % pp	Depends on diode voltage
Diode voltage Output power	29 V max 400 W max	Depends on supply voltage
Current limit Current limit	0 50 A 0 60 A	DT 400-50 DT 400-60 Adjustable by potentiometer or by control signal
Accuracy Temperature stability	± 0.1 % ± 50 ppm / °C	
Output TEC Output voltage Output voltage limit Output current Output power Temperature range	0 ± 29 V max 0 ± 29 V max 15 A max 450 W max 0 +50 °C	Depends on supply voltage Adjustable by potentiometer Adjustable by potentiometer or by
Accuracy	± 0.1 K	control signal
Temperature sensors	KTY 11-5 or PT 1000	Selectable by jumper
Analog Inputs		
CA-DCSP1 Diode current set point 1	0 +5 V	for 0 50 A DT 400-50 for 0 60 A DT 400-60
CA-DCSP2 Diode current set point 2	0 +5 V	for 0 50 A DT 400-50 for 0 60 A DT 400-60
CA-DCL Diode current limit	0 +5 V	for 0 50 A DT 400-50 for 0 60 A DT 400-60
CA-PTSP Peltier temperature set point	0 +5 V	for 0 +50 °C

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Analog Outputs		
Analog Outputs		
SA-DCACT Diode current actual SA-DCSPLIM	0 +5 V	for 0 50 A
Diode current set point limited	0 +5 V	for 0 50 A
Diode voltage	0 +5 V	for 0 25 V
Peltier temperature actual	0 +5 V	for 0 +50 °C
Reference voltage	+5 V	2 mA max
Reference voltage adjustable	0 +5 V	Adjustable by potentiometer 2 mA max
AUX+5V Auxiliary voltage +5 V AUX+15V	+5.1 V	Current up to 200 mA
AUX+15V Auxiliary voltage +15 V AUX-15V	+15 V	Current up to 100 mA
Auxiliary voltage -15 V	-15 V	Current up to 100 mA
Digital Inputs		
CD-DCON Diode Current On	+ 5 V	Connected to GND for 1 ms switches on (On/Off mode)
CD-DCOFF Diode Current Off	+ 5 V	Connected to GND for 1 ms turns off (On/Off mode)
CD-DCSD Diode Current Shut Down	TTL	Active Low or High, selectable by jumper
CD-PSD Peltier Shut Down	TTL	High turns the TEC voltage off
Digital Outputs		
SD-READY		
Ready	TTL	Open emitter, High if there are no errors
SD-DCON Diode Current On	TTL	Open emitter, High if the diode current is switched on
SD-DCSD Diode Current Shut Down	TTL	Open emitter, High if the diode current Shut Down is active

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

SD-PTL Peltier Temperature Low	٦	TTL	Open emitter, High if the peltier temperature is low	
SD-PTH Peltier Temperature High	٢	TTL	Open emitter, High if the peltier	
SD-PTI Peltier Temperature Interl	ock 7	TTL	temperature is high Open emitter, High if the peltier	
			temperature exceeds the maxin allowed temperature. The system is turned off. The threshold value is adjustab potentiometer.	num
Operating modes There are two operating n The mode is selectable by		n/Off and mode Au	to on.	
Mode On/Off This mode is recommende panel which has two butto No external logic or addition	ns, one for Lase	er On and one for I		rol
programmable logic contro In this case, the device is	oller. permanently in	an on-state.	rolled by a microprocessor or by a	
Jumper Settings and Ad	justment Elem	ents		
TEC Vo Temperature Int Temperature Set Poir		Operating Mode On/	Low ensor PT 1000	
Release 1.0 2007 © Messtec Po	wer Converter Gmbł	H www.laserdriver.eu		Page 9

age 9

mpc Laser Power Supplies DT 400 DC Port X2 DC Port X2 8 pole terminal block, for connecting supply voltage, thermo-electrical cooler and temperature sensor. HAAAAAAA 4 Conductor cross section min. 0.14 gmm Conductor cross section max. 2.5 qmm Inputs Pin Name Function 1 +SVDU + Supply voltage diode unit 2 -SVDU - Supply voltage diode unit -SVTU - Supply voltage TEC unit 3 4 +SVTU + Supply voltage TEC unit 5 +TEC + Thermoelectrical cooler -TEC - Thermoelectrical cooler 6 7 ΤS Temperature sensor 8 тs Temperature sensor The supply voltage for the diode unit and the TEC unit are separated, with a common minus, pin 2 and pin 3 are connected internally. The advantage over a single supply is that it is more flexible. For instance it is possible to supply the diode unit by a 15 V power supply and the TEC unit by a 24 V power supply. Additionally for building up a system with a safety interlock, separate supply lines are required because the diode unit must be electrically disconnected if an interlock occurs, whereas the TEC unit must operate and may not be disconnected. It is not neccessary to use separate power supplies, it is also possible to supply the DT 400 by a single power supply. In this case pin 1 and pin 4 must be connected together. If the DT 400 is only used for supplying laser diodes and the TEC unit is not used, supplying of the TEC unit is however mandatory because the internal circuit of the DT 400 is supplied by the TEC unit. In this case pin 1 and pin 4 must be connected together. Important The output for the laser diodes and the output for the TEC is not electrically isolated from the supply voltage. Never connect the outputs to the supply voltage. Never connect the diode outputs to the TEC outputs. The signals and the GND of the Control Port are mostly isolated via instrumentation amplifiers, but not fully galvanically isolated from the diode output and from the TEC output . It is possible to connect the GND of the Control Port to +SVDU or -SVDU of the supply voltage, or to +SVTU or -SVTU of the supply voltage, or to + or - of the diode output or to +TEC or -TEC of the TEC output.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc **DT 400** Laser Power Supplies Control Port **Control Port X3** \odot \odot 25-pole female plug connector according to DIN 41652 and MIL-C-24308, female thread UNC 4-40. CA=Control Data Analog **CD=Control Data Digital** SA=Status Data Analog SD=Status Data Digital Inputs Pin Name Function CA-DCSP1 **Diode Current Set Point 1** 15 CA-DCSP2 3 Diode Current Set Point 2 CA-DCL **Diode Current Limit** 2 CA-PTSP Peltier Temperature Set Point 20 5 CD-DCON **Diode Current On** 18 CD-DCOFF **Diode Current Off** CD-DCSD Diode Current Shut Down 6 CD-PSD 21 Peltier Voltage Shut Down 1 GND Signal Ground Outputs Pin Name Function SA-DCACT **Diode Current Actual** 4 16 SA-DCSPLIM **Diode Current Set Point Limited** 17 SA-DVACT **Diode Voltage Actual** SA-PTACT 8 Peltier Temperature Actual 24 REF **Reference Voltage** 11 REFVAR Reference Voltage Adjustable Auxiliary Voltage +5 V AUX+5V 12 25 AUX+15V Auxiliary Voltage +15 V 13 AUX-15V Auxiliary Voltage -15 V SD-READY 23 Ready Diode Current On 19 SD-DCON 7 SD-DCSD Diode Current Shut Down SD-PTL Peltier Temperature Low 9 SD-PTH 22 Peltier Temperature High 10 SD-PTI Peltier Temperature Interlock GND Signal Ground 1

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

 \odot

Control Port

 $(\mathbf{0})$

Signal description

CA-DCSP1

Control Analog - Diode Current Set Point 1 Analog input 0 ... +5.000 V, corresponds to a diode current of 0 ... 50.00A.

CA-DCSP2

Control Analog - Diode Current Set Point 2 Analog input 0 ... +5.000 V, corresponds to a diode current of 0 ... 50.00A.

Diode Current Set Point 1 and Diode Current Set Point 2 will be added internally and generate the effective current set point.

A current set point with negative sign acts subtracting.

CA-DCL

Control Analog - Diode Current Limit Analog input 0 ... +5.000 V, corresponds to a diode current limit of 0 ... 50.00 A.

There are four possibilities for diode current limiting, limiting by CA-DCL, by memory, by RS 232 or by the diode current limit potentiometer.

If limiting by CA-DCL or by memory or by RS 232 is selected, the current limit potentiometer has to be turned clockwise to its maximum value. If limiting by the diode current limit potentiometer is selected, the CA-DCL input must be

If limiting by the diode current limit potentiometer is selected, the CA-DCL input must be connected to the REF output (+5.000 V).

CA-PTSP

Control Analog - Peltier Temperature Set Point

Analog input 0 ... +5.000 V, corresponds to a peltier temperature of 0 ... + 50.00 °C.

There are four possibilities for a temperature set point, by CA-PTSP, by memory, by RS 232 or by the temperature set point potentiometer.

If a temperature set point by CA-PTSP or by memory or by RS 232 is selected, the temperature set point potentiometer has to be turned counterclockwise to its minimum value.

If a temperature set point by the temperature set point potentiometer is selected, the CA-PTSP input has to be left open.

The value of the CA-PTSP signal and the value which comes from the temperature set point potentiometer will be added internally and generate the effective temperature set point. It is also possible, to combine both values e.g. giving a temperature set point of 20 °C by the potentiometer and adding or subtracting 10 °C by a value of ± 1 V at the CA-PTSP input.

SA-DCACT

Status Analog - Diode Current Actual Analog ouput 0 ... 5.000 V, corresponds to a diode current of 0 ... 50 A.

SA-DCSPLIM

Status Analog - Diode Current Set Point Limited Analog output 0 ... 5.000 V, reflects the diode current set point, limited by the diode current limit value of CA-DCL or by the value of the current limit potentiometer.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

 \odot

Control Port

 \odot

SA-DVACT

Status Analog - Diode Voltage Actual Analog output 0 ... +5.000 V, corresponds to a diode voltage of 0 ... +25.00 V. Reflects the actual diode voltage.

SA-PTACT

Status Analog - Peltier Temperature Actual Analog output 0 ... +5.000 V, corresponds to a peltier temperature of 0 ... +50,00 °C. Reflects the actual peltier temperature.

REF

Analog output +5.000 V

REFVAR

Analog output 0 ... +5.000 V, adjustable by the reference voltage potentiometer.

AUX+5V

Output +5.1 V, for supplying external components. Maximum allowable current: 200 mA.

AUX+15V

Output +15 V approximately, for supplying external components. Maximum allowable current: 100 mA.

AUX-15V

Output -15 V approximately, for supplying external components. Maximum allowable current: 100 mA.

CD-DCON

Control Digital - Diode Current On Digital TTL input, High if left open. In the operating mode On/Off the input acts in the following way: If the input is pulled to GND for approximately 1 ms, the diode current will be switched on. The diode current remains switched on until a CD-DCOFF signal turns off. In the operating mode Auto On, the input is without effect.

CD-DCOFF

Control Digital - Diode Current Off Digital TTL input, High if left open. In the operating mode On/Off the input acts in the following way: If diode current is switched on and if the input is pulled to GND for approximately 1 ms, the diode current will be turned off. The diode current remains in an off-stae until a CD-DCON signal turns on. In both operating modes the CD-DCOFF input also acts as a system reset if an error has occured. In this case the system will be resetted if the input is pulled to GND for approximately 1 ms.

CD-DCSD

Control Digital - Diode Current Shut Down Digital TTL input, active High or active Low, selectable by a jumper. Disables or enables diode current, useful for pulsing.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

General Instructions

Peltier element, cooling plate and heat sink

Do not operate a peltier element at its maximum limit or maximum cooling capacity, the electrical power loss will be very high and the efficiency will be very bad.


Operate the peltier element at a voltage of half of the maximum allowed voltage. Select a peltier element whose cooling capacity is sufficient at a operating voltage of half of the maximum allowed operating voltage.

Try to spread the heat dissipation of the laser diodes by a extensive cooling plate, use extensive peltier elements ore multiple peltier elements instead of a single one.

Temperature sensor

Use small temperature sensors with a low thermal mass, the sensor must have a good thermal contact to the cooling plate. This is very important for the stability of the closed loop. Use adhesives with high thermal conductivity for bonding the sensor. Do not use thick wires for connecting, this will draw away thermal energy and will degrade performance. A good solution is Messtec's 10360254 sensor using a KTY 11-5. It has two soldering pads for connecting and it is easy to handle.

The figure shows an application with the 10360254 sensor.

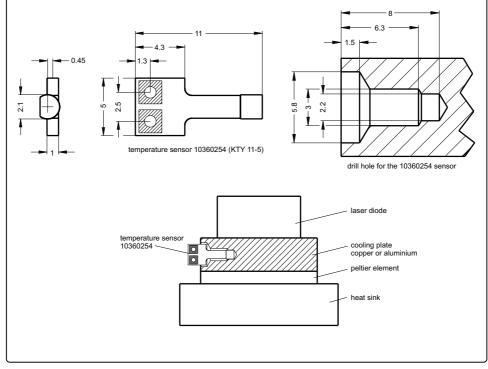

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

General Instructions

TEC voltage limit

Adjust the TEC voltage limit before connecting a peltier element.

Connect a temperature sensor, either Messtec's 10360254 (KTY 11-5), a conventional KTY 11-5 or a PT 1000 to pin 7 and pin 8 of X2.

Pay attention to the proper jumper setting.

You can also take a 1000 Ω resistor instead of a temperature sensor, in this case set the jumper to PT 1000.

Connect a voltmeter to the TEC ouput and turn the DT 400 on.

Adjust TEC voltage to the maximum allowed value of your peltier element.

Temperature interlock

Do not adjust the trigger point very close to the operating temperature. Consider that in most cases a thermal overshoot will occur if the system is turned on.

Diode current and diode current limit

Do not connect laser diodes if it is the first time you put a DT 400 into operation. Use a short circuit instead of laser diodes, connect the +laser diode output to the -laser diode output.

Connect a voltmeter to the SA-DCACT output (Diode Current Actual) and to GND of the control port. Turn on the DT 400 and feed in a current set point of 0 ... 5 V at the CA-DCSP1 input. Watch the voltmeter, it reflects the diode current, in this case it reflects the current which flows through the short circuit. The reading value must be identical to the current set point. For instance if you have a DT 400-50 and the current set point is 5 V, the reading value must be 5 V, reflecting a current of 50 A through the short circuit.

Adjust the diode current limit potentiometer.

Example: You have a DT 400-60 and you would like to limit the diode current to a value of 55 A. Feed in a current set point of 5 V, voltmeter reading is now 5 V, reflecting 60 A current. Turn the diode current limit potentiometer counterclockwise to a reading value of 4.58 V, reflecting 55 A current.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

Application 1


Simple laser system, only a switch for Laser On is required.

Adjustments

Diode current: reference voltage potentiometer at DT 400. Diode current limit: diode current limit potentiometer at DT 400. TEC temperature: temperature set point potentiometer at DT 400. TEC excess temperature: temperature interlock potentiometer at DT 400. TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: Auto On Shut Down: Active Low

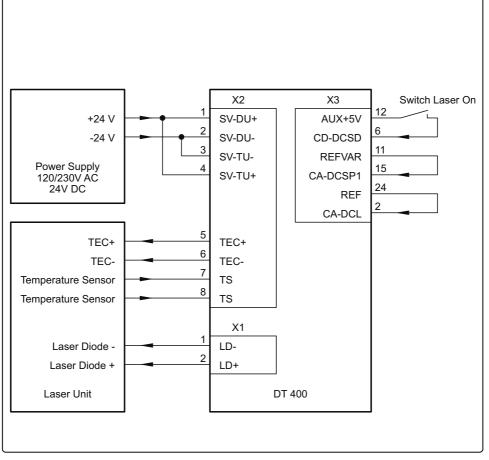

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

Application 2

Manually operated laser system, no additional power supply is required.

Required external components:

- 1 potentiometer 10K for the current set point
- 2 buttons for Laser On and Laser Off
- 1 DVM for indicating current set point
- 6 LEDs and 6 resistors for indicating states


Adjustments

Diode current: external potentiometer.

- Diode current range, upper limit: reference voltage potentiometer at DT 400.
- Diode current limit: diode current limit potentiometer at DT 400.
- TEC temperature: temperature set point potentiometer at DT 400.
- TEC excess temperature: temperature interlock potentiometer at DT 400.
- TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High

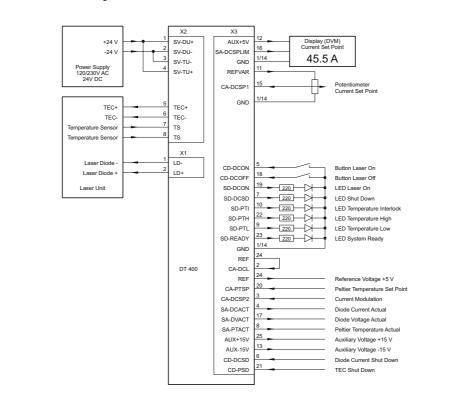

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 3

Manually operated laser system, no additional power supply is required.

Required external components:

- 1 potentiometer 10K for the current set point
- 1 potentiometer 10K for the temperature set point
- 2 buttons for Laser On and Laser Off
- 1 DVM for indicating current set point
- 1 DVM for indicating temperature set point
- 6 LEDs and 6 resistors for indicating states

Adjustments

Diode current set point: external potentiometer.

TEC temperature set point: external potentiometer.


Diode current range, upper limit: reference voltage potentiometer at DT 400.

Diode current limit: diode current limit potentiometer at DT 400.

- TEC excess temperature: temperature interlock potentiometer at DT 400.
- TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High

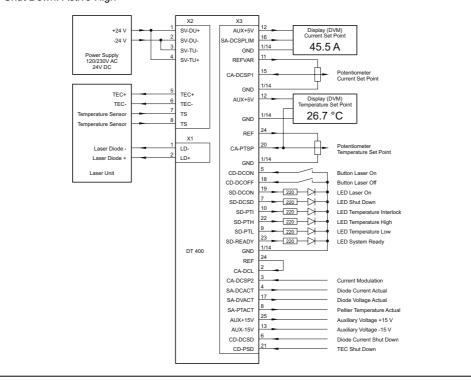

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

Application 4


Fully microprocessor controlled laser system, no additional power supply is required.

Adjustments

Adjust diode current limit potentiometer at DT 400 clockwise to its maximum value. Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value. Adjust temperature interlock potentiometer at DT 400 clockwise to its maximum value. TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: auto On or On/Off Shut Down: Active Low or active High

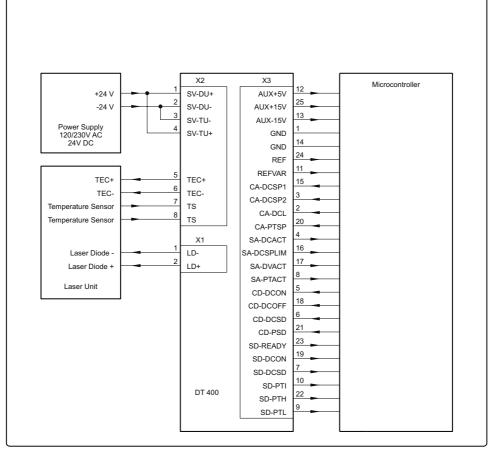

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 5

Manually operated laser system using control panel 10227011 with current set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, six LEDs for indicating states, and two additional coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal. No additional power supply is required.

Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Diode current limit: diode current limit potentiometer at DT 400.


TEC temperature: temperature set point potentiometer at DT 400.

TEC excess temperature: temperature interlock potentiometer at DT 400.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High or active Low

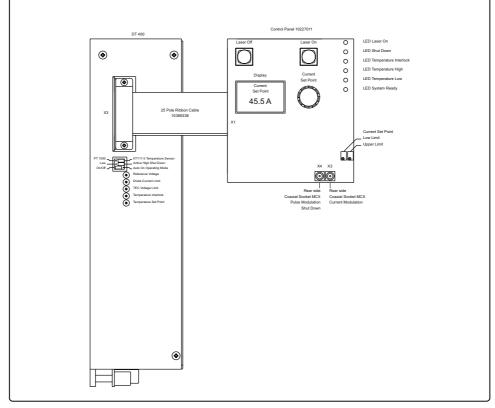

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 6

Manually operated laser system using control panel 10227012 with current set point potentiometer, temperature set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point, six LEDs for indicating states, and two additional coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal. No additional power supply is required.

Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Diode current limit: diode current limit potentiometer at DT 400.


TEC temperature set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 10.5 °C to 26.7 °C.

Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value. TEC excess temperature: temperature interlock potentiometer at DT 400.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High or active Low

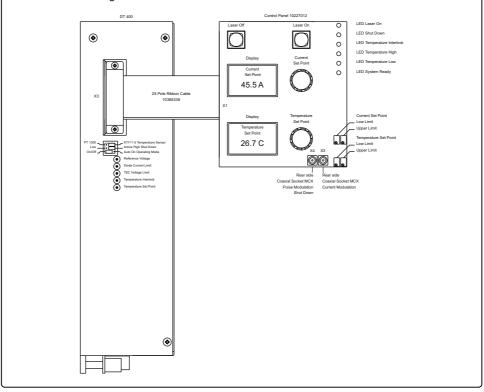

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 7

Manually operated complete laser system utilizing accessories kits. No additional power supply is required.

Front panel

Key-operated switch and emergency stop button for the mains voltage. Current set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point and six LEDs for indicating states.

Rear panel

Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227011

with current set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, six LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

Heat sink 10500882

for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347

with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes.

25 pole ribbon cable 10385338

length 350 mm.


Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A. Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value. Diode current limit: diode current limit potentiometer at DT 400. TEC temperature set point: temperature set point potentiometer at DT 400. TEC excess temperature: temperature interlock potentiometer at DT 400. TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

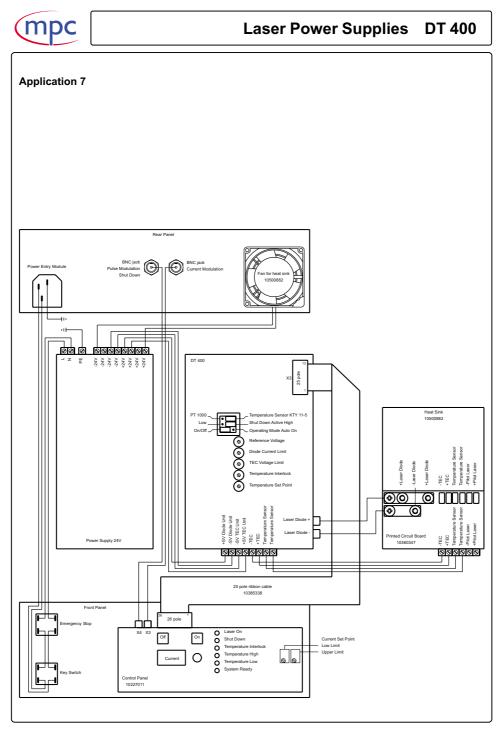

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 8

Manually operated complete laser system utilizing accessories kits. No additional power supply is required.

Front panel

Key-operated switch and emergency stop button for the mains voltage. Current set point potentiometer, temperature set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point and six LEDs for indicating states.

Rear panel

Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227012

with current set point potentiometer, temperature set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point, six LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

Heat sink 10500882

for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347

with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes.

25 pole ribbon cable 10385338

length 350 mm.

Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Diode current limit: diode current limit potentiometer at DT 400.

TEC temperature set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 10.5 °C to 26.7 °C.


Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value. TEC excess temperature: temperature interlock potentiometer at DT 400.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings

Operating mode: On/Off Shut Down: Active High

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

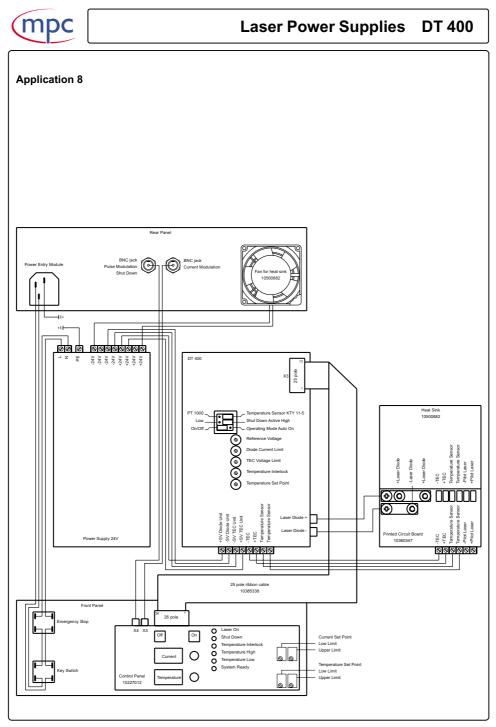

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 9

Manually operated and remote-controlled complete laser system utilizing accessories kits. The system can be fully configured and controlled via the RS 232 port and fully controlled via the control port.

Signal levels at the control port meet the common industry standard for directly connecting a programmable controller (PLC) or any other controller.

The option of system configuring via the RS 232 port and set-up software (requires a PC with Windows[™] operating system) makes the system exceptionally flexible. For example it is possible to define in both operating modes (local or remote), where the current set point shall come from, from internal nonvolatile memory, from control port or from control panel. No additional power supply is required.

Front panel Key-operated switch and emergency stop button for the mains voltage, current set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point and seven LEDs for indicating current states.

Rear panel Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down, switch Local/Remote, 9 pole female plug connector of RS 232 port and 25 pole female plug connector of control port.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227013 with current set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, seven LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

Control interface 10227003 with RS 232 port, control port, set-up software and control software.

Heat sink 10500882 for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes. 26 pole ribbon cable 10385364 length 480 mm.

25 pole ribbon cable 10385365 length 565 mm.

Adjustments

Diode current set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A, by analog signal at the control port, by internal memory or by RS 232 control.

Diode current limit: by analog signal at the control port, by internal memory or by RS 232 control. TEC temperature set point: by analog signal at the control port, by internal memory or by RS 232 control.

TEC excess temperature: by internal memory or by RS 232 control.

Shut down polarity: by internal memory.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.


Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Adjust diode current limit potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature interlock potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value.

Windows is a registered trademark of the Microsoft Corporation USA

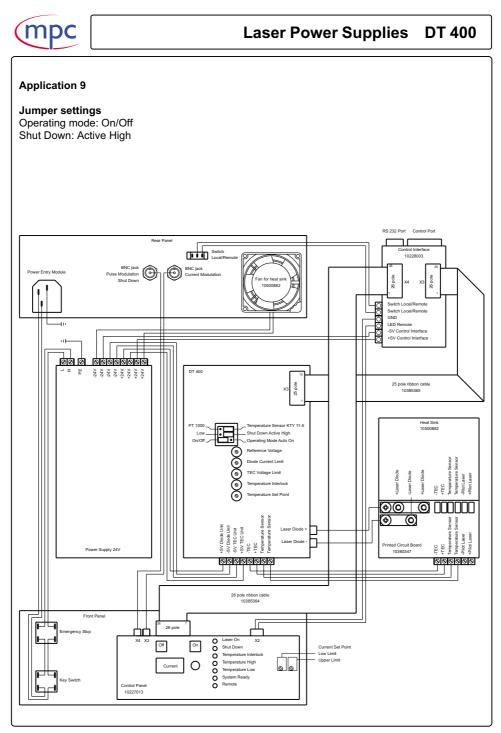

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 10

Manually operated and remote-controlled complete laser system utilizing accessories kits. The system can be fully configured and controlled via the RS 232 port and fully controlled via the control port.

Signal levels at the control port meet the common industry standard for directly connecting a programmable controller (PLC) or any other controller.

The option of system configuring via the RS 232 port and set-up software (requires a PC with Windows[™] operating system) makes the system exceptionally flexible. For example it is possible to define in both operating modes (local or remote), where the current set point shall come from, from internal nonvolatile memory, from control port or from control panel. No additional power supply is required.

Front panel Key-operated switch and emergency stop button for the mains voltage, current set point potentiometer, temperature set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point and seven LEDs for indicating current states.

Rear panel Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down, switch Local/Remote, 9 pole female plug connector of RS 232 port and 25 pole female plug connector of control port.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227014 with current set point potentiometer, temperature set point potentiometer, two buttons for Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point, seven LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

Control interface 10227003 with RS 232 port, control port, set-up software and control software. **Heat sink 10500882** for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes. 26 pole ribbon cable 10385364 length 480 mm.

25 pole ribbon cable 10385365 length 565 mm.

Adjustments

Diode current set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A, by analog signal at the control port, by internal memory or by RS 232 control.

Diode current limit: by analog signal at the control port, by internal memory or by RS 232 control. TEC temperature set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 10.5 °C to 26.7 °C, by analog signal at the control port, by internal memory or by RS 232 control.

TEC excess temperature: by internal memory or by RS 232 control.

Shut down polarity: by internal memory.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.


Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Adjust diode current limit potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature interlock potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value.

Windows is a registered trademark of the Microsoft Corporation USA

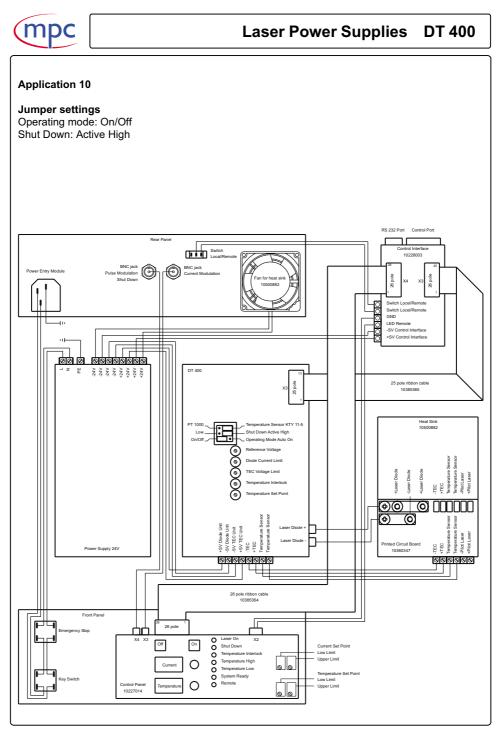

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 11

Manually operated complete laser system with safety interlock utilizing accessories kits. No additional power supply is required.

See chapter interlock unit 10228002 for further informations regarding to the functionality of the interlock unit.

Front panel Key-operated switch and emergency stop button for the mains voltage, a current set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point and seven LEDs for indicating states. **Rear panel** Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down and a switch for a pilot laser.

Accessories Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227015 with current set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, seven LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button.

Interlock unit 10228002 with a 5 V output for a pilot laser and a 12 V output for a fan or suchlike. The output voltage for the shutter is selectable by a jumper, either 12 V or the voltage of the mains power supply, in this application 24 V. See chapter interlock unit 10228002 for further informations.

Heat sink 10500882 for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and

5 pole terminal with female thread M5 for the laser diodes.

25 pole ribbon cable 10385363 length 150 mm.

26 pole ribbon cable 10385364 length 480 mm.

Mounting kit 10228007 including two connection bolts and four lines for connecting the output of the DT 400 to the interlock unit.

Mounting kit 10228008 including two connecting plates for connecting the output of the interlock unit to the printed circuit board 10360347 at heatsink 10500882.

Only required if heatsink 10500882 with printed circuit board is used.

Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.


Diode current limit: diode current limit potentiometer at DT 400.

TEC temperature set point: temperature set point potentiometer at DT 400.

TEC excess temperature: temperature interlock potentiometer at DT 400.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

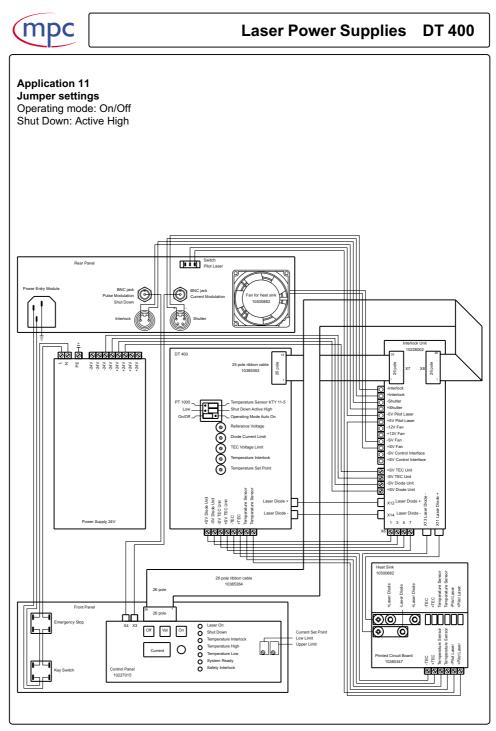

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 12

Manually operated complete laser system with safety interlock utilizing accessories kits. No additional power supply is required.

See chapter interlock unit 10228002 for further informations regarding to the functionality of the interlock unit.

Front panel Key-operated switch and emergency stop button for the mains voltage, a current set point potentiometer, a temperature set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point and seven LEDs for indicating states. Rear panel Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down, an input for the interlock, an output for a shutter and a switch for a pilot laser. Accessories Power supply 10870022 120/230 V AC 24V/20 A DC Control panel 10227016 with current set point potentiometer, temperature set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point, seven LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal. The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button. Interlock unit 10228002 with a 5 V output for a pilot laser and a 12 V output for a fan or suchlike. The output voltage for the shutter is selectable by a jumper, either 12 V or the voltage of the mains power supply, in this application 24 V.

See chapter interlock unit 10228002 for further informations.

Heat sink 10500882 for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes.

25 pole ribbon cable 10385363 length 150 mm.

26 pole ribbon cable 10385364 length 480 mm.

Mounting kit 10228007 including two connection bolts and four lines for connecting the output of the DT 400 to the interlock unit.

Mounting kit 10228008 including two connecting plates for connecting the output of the interlock unit to the printed circuit board 10360347 at heatsink 10500882.

Only required if heatsink 10500882 with printed circuit board is used.

Adjustments

Diode current set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Diode current limit: diode current limit potentiometer at DT 400.


Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 12

TEC temperature set point: potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 10.5 °C to 26.7 °C. Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value. TEC excess temperature: temperature interlock potentiometer at DT 400. TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Jumper settings Operating mode: On/Off Shut Down: Active High

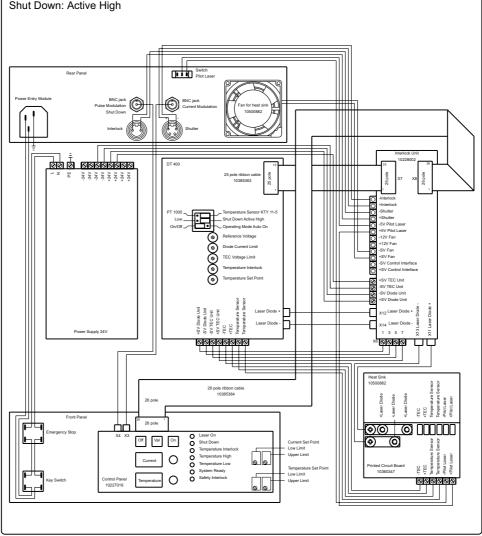

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

Application 13

Manually operated and remote-controlled complete laser system with safety interlock utilizing accessories kits.

The system can be fully configured and controlled via the RS 232 port and fully controlled via the control port.

Signal levels at the control port meet the common industry standard for directly connecting a programmable controller (PLC) or any other controller.

The option of system configuring via the RS 232 port and set-up software (requires a PC with Windows™ operating system) makes the system exceptionally flexible. For instance it is possible to define in both operating modes (local or remote), where the current set point shall come from, from internal nonvolatile memory, from control port or from control panel. No additional power supply is required.

See chapter interlock unit 10228002 for further informations regarding to the functionality of the interlock unit.

Front panel Key-operated switch and emergency stop button for the mains voltage,

a current set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point and eight LEDs for indicating states.

Rear panel Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down, a 9 pole female plug connector of RS 232 port, a 25 pole female plug connector of control port, an input for the interlock, an output for a shutter, a switch for a pilot laser and a switch for Local/Remote.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227017 with current set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, eight LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button.

Control interface 10227003 with RS 232 port, control port, set-up software and control software.

Interlock unit 10228002 with a 5 V output for a pilot laser, a 12 V output for a fan or suchlike and an output for supplying the control interface.

The output voltage for the shutter is selectable by a jumper, either 12 V or the voltage of the mains power supply, in this application 24 V.

See chapter interlock unit 10228002 for further informations.

Heat sink 10500882 for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes.

Windows is a registered trademark of the Microsoft Corporation USA

Laser Power Supplies DT 400

Application 13

5 pole ribbon cable 10385359 length 362 mm.

26 pole ribbon cable 10385360 length 260 mm.

26 pole ribbon cable 10385361 length 525 mm.

Mounting kit 10228007 including two connection bolts and four lines for connecting the output of the DT 400 to the interlock unit.

Mounting kit 10228008 including two connecting plates for connecting the output of the interlock unit to the printed circuit board 10360347 at heatsink 10500882. Only required if heatsink 10500882 with printed circuit board is used.

Adjustments

Diode current set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A, by analog signal at the control port, by internal memory or by RS 232 control.

Diode current limit: by analog signal at the control port, by internal memory or by RS 232 control. TEC temperature set point: by analog signal at the control port, by internal memory or by RS 232 control.

TEC excess temperature: by internal memory or by RS 232 control.

Shut down polarity: by internal memory.

TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.

Adjust diode current limit potentiometer at DT 400 clockwise to its maximum value.


Adjust temperature interlock potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value.

Jumper settings

Operating mode: On/Off Shut Down: Active High

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

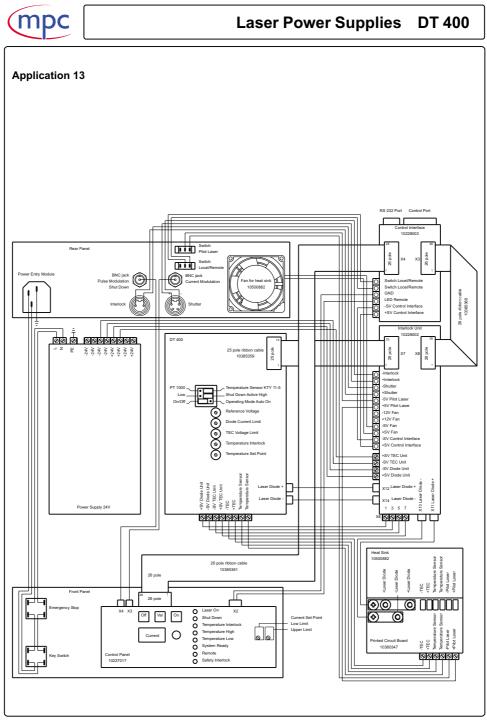

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu



Laser Power Supplies DT 400

Application 14

Manually operated and remote-controlled complete laser system with safety interlock utilizing accessories kits.

The system can be fully configured and controlled via the RS 232 port and fully controlled via the control port.

Signal levels at the control port meet the common industry standard for directly connecting a programmable controller (PLC) or any other controller.

The option of system configuring via the RS 232 port and set-up software (requires a PC with Windows™ operating system) makes the system exceptionally flexible. For instance it is possible to define in both operating modes (local or remote), where the current set point shall come from, from internal nonvolatile memory, from control port or from control panel. No additional power supply is required.

See chapter interlock unit 10228002 for further informations regarding to the functionality of the interlock unit.

Front panel Key-operated switch and emergency stop button for the mains voltage, a current set point potentiometer, a temperature set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, a digital display for the temperature set point and eight LEDs for indicating states.

Rear panel Connector for the mains voltage, BNC jack for analog current modulation, BNC jack for TTL pulse modulation signal or TTL shut down, a 9 pole female plug connector of RS 232 port, a 25 pole female plug connector of control port, an input for the interlock, an output for a shutter, a switch for a pilot laser and a switch for Local/Remote.

Accessories

Power supply 10870022 120/230 V AC 24V/20 A DC

Control panel 10227018 with current set point potentiometer, temperature set point potentiometer, three buttons for Interlock Validation, Laser On and Laser Off, a digital display for the current set point, digital display for the temperature set point, eight LEDs for indicating states and two coaxial sockets MCX for feeding in analog current modulation signal and TTL pulse modulation signal or TTL shut down signal.

The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button.

Control interface 10227003 with RS 232 port, control port, set-up software and control software.

Interlock unit 10228002 with a 5 V output for a pilot laser, a 12 V output for a fan or suchlike and an output for supplying the control interface.

The output voltage for the shutter is selectable by a jumper, either 12 V or the voltage of the mains power supply, in this application 24 V.

See chapter interlock unit 10228002 for further informations.

Heat sink 10500882 for mounting printed circuit board 10360347, peltier elements and laser diodes.

Printed circuit board 10360347 with 6 pole terminal clamp and soldering pads for TEC, temperature sensor and pilot laser and 5 pole terminal with female thread M5 for the laser diodes.

Windows is a registered trademark of the Microsoft Corporation USA

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Application 14

5 pole ribbon cable 10385359 length 362 mm.

26 pole ribbon cable 10385360 length 260 mm.

26 pole ribbon cable 10385361 length 525 mm.

Mounting kit 10228007 including two connection bolts and four lines for connecting the output of the DT 400 to the interlock unit.

Mounting kit 10228008 including two connecting plates for connecting the output of the interlock unit to the printed circuit board 10360347 at heatsink 10500882. Only required if heatsink 10500882 with printed circuit board is used.

Adjustments

Diode current set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 35.6 A to 45.5 A, by analog signal at the control port, by internal memory or by RS 232 control.

Diode current limit: by analog signal at the control port, by internal memory or by RS 232 control. TEC temperature set point: by potentiometer at control panel, low limit and upper limit can be adjusted by two potentiometers e.g. from 10.5 °C to 26.7 °C, by analog signal at the control port, by internal memory or by RS 232 control.

TEC excess temperature: by internal memory or by RS 232 control.

Shut down polarity: by internal memory. TEC voltage limit: TEC voltage limit potentiometer at DT 400.

Adjust reference voltage potentiometer at DT 400 clockwise to its maximum value.


Adjust diode current limit potentiometer at DT 400 clockwise to its maximum value.

Adjust temperature interlock potentiometer at DT 400 clockwise to its maximum value. Adjust temperature set point potentiometer at DT 400 counterclockwise to its minimum value.


Jumper settings

Operating mode: On/Off Shut Down: Active High


Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

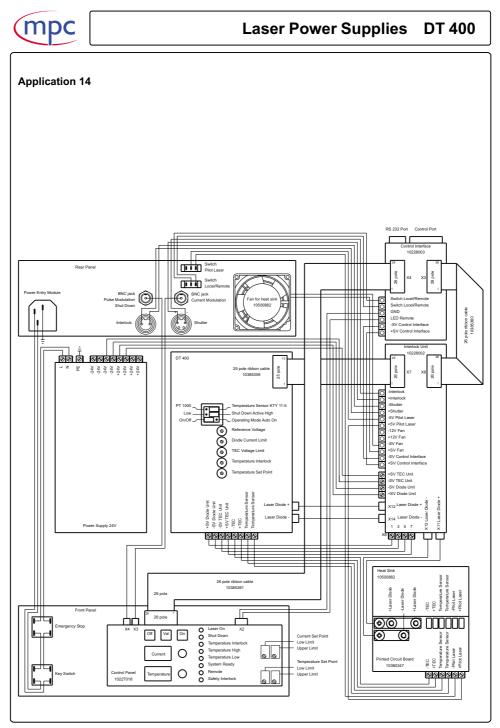

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

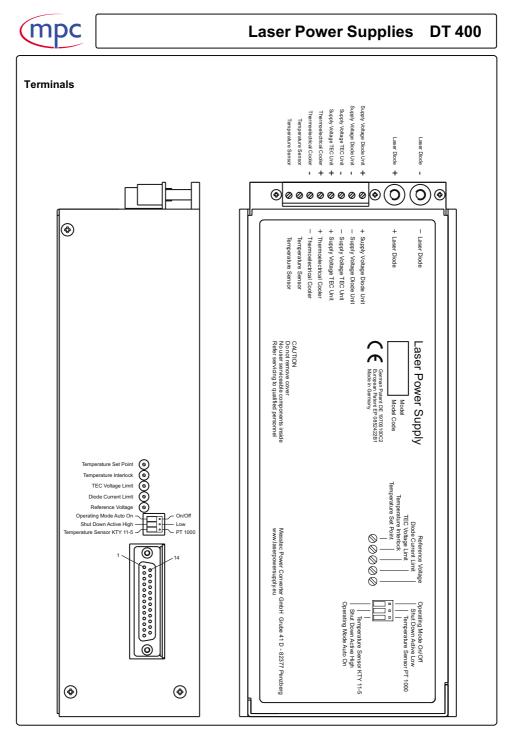

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

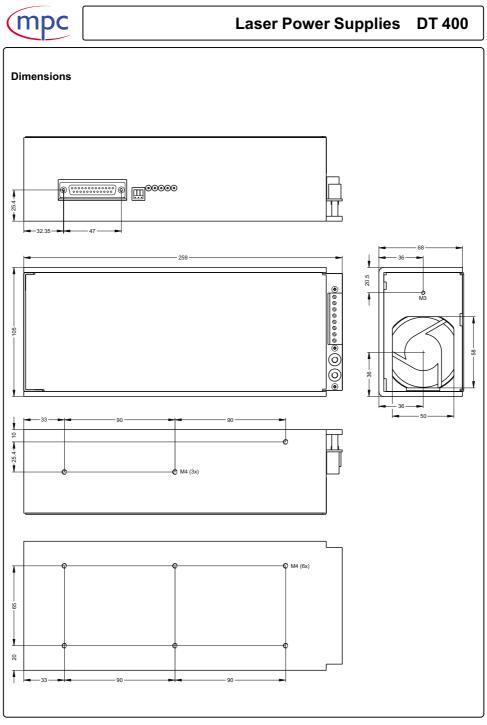

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400 mpc Accessories Control Panel 10227011 and 10227012 This panels are suited for applications where a DT 400 works without control interface and without interlock unit. Both panels have buttons for Laser On and Laser Off and six LEDs for indicating states. The 10227011 has a display and a potentiometer for the current set point, whereas the 10227012 additionally has a display and a potentiometer for the temperature set point. Low limit and upper limit of the set point range can be adjusted by two potentiometers, e.g from 45.5 A to 59 A for the current set point, or from 18,5 °C to 32,2 °C for the temperature set point. At the rear side there is X1, a 26 pole header (Tyco V23535A), and X2, a 4 pole header MC0,5/ 4-G-2,5 (Phoenix Contact) for supplying an optional pilot laser with 5 V. Also at the rear side there are two coaxial sockets MCX for feeding in an analog current modulation signal at X3 and a TTL pulse modulation signal or TTL shut down signal at X4. See application 7 and 8 for more information. 10227012 10227011 0 Laser On 0 0 Laser On 0 Shut Dowr 0 Shut Dow 0 0 0 mperature High Temperature High 0 ont Set Pr ent Set Poin 0 0 Temperature Low Temperature Low 0 System Ready 0 System Ready 58.8 58.8 Current Set Po Low Limit Upper Limit rrent Set Point ire Set Po Low Limit Upper Limit 17.2 Temperature Set Point Low Limit Upper Limit

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Panel 10227013 and 10227014


This panels are suited for applications in conjunction with control interface 10228003.

Both panels have buttons for Laser On and Laser Off and seven LEDs for indicating states. The 10227013 has a display and a potentiometer for the current set point, whereas the 10227014 additionally has a display and a potentiometer for the temperature set point. Low limit and upper limit of the set point range can be adjusted by two potentiometers, e.g from 45.5 A to 59 A for the current set point, or from 18,5 °C to 32,2 °C for the temperature set point.

At the rear side there is X1, a 26 pole header (Tyco V23535A), and X2, a 4 pole header MC0,5/ 4-G-2,5 (Phoenix Contact) for driving the Remote LED by the control interface and for supplying an optional pilot laser with 5 V.

Also at the rear side there are two coaxial sockets MCX for feeding in an analog current modulation signal at X3 and a TTL pulse modulation signal or TTL shut down signal at X4.

See application 9 and 10 for more information.

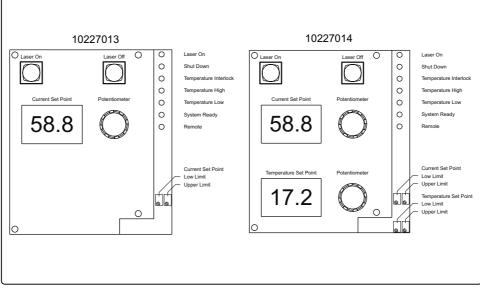

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Panel 10227015 and 10227016

This panels are suited for applications in conjunction with interlock unit 10228002.

Both panels have buttons for Interlock Validation, Laser On and Laser Off and seven LEDs for indicating states.

The 10227015 has a display and a potentiometer for the current set point, whereas the 10227016 additionally has a display and a potentiometer for the temperature set point. Low limit and upper limit of the set point range can be adjusted by two potentiometers, e.g from


45.5 A to 59 A for the current set point, or from 18,5 °C to 32,2 °C for the temperature set point.

At the rear side there is X1, a 26 pole header (Tyco V23535A), and X2, a 4 pole header MC0,5/ 4-G-2,5 (Phoenix Contact) for supplying an optional pilot laser with 5 V.

Also at the rear side there are two coaxial sockets MCX for feeding in an analog current modulation signal at X3 and a TTL pulse modulation signal or TTL shut down signal at X4.

The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button.

See application 11 and 12 for more information.

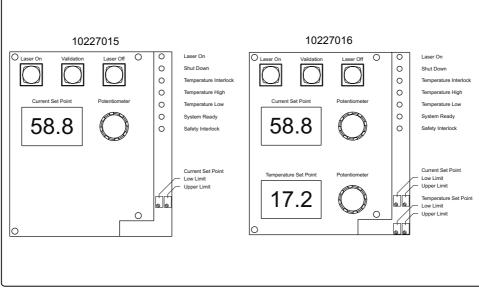

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Panel 10227017 and 10227018

This panels are suited for applications in conjunction with interlock unit 10228002 and control interface 10228003.

Both panels have buttons for Interlock Validation, Laser On and Laser Off and eight LEDs for indicating states.

The 10227017 has a display and a potentiometer for the current set point, whereas the 10227018 additionally has a display and a potentiometer for the temperature set point.


Low limit and upper limit of the set point range can be adjusted by two potentiometers, e.g from 45.5 A to 59 A for the current set point, or from 18,5 $^\circ$ C to 32,2 $^\circ$ C for the temperature set point.

At the rear side there is X1, a 26 pole header (Tyco V23535A), and X2, a 4 pole header MC0,5/ 4-G-2,5 (Phoenix Contact) for driving the Remote LED by the control interface and for supplying an optional pilot laser with 5 V.


Also at the rear side there are two coaxial sockets MCX for feeding in an analog current modulation signal at X3 and a TTL pulse modulation signal or TTL shut down signal at X4.

The validation button can be disabled by a jumper, this simplifies operating because the button must not be pressed every time an interlock occures. Check country-specific regulations before disabling the validation button.

See application 13 and 14 for more information.

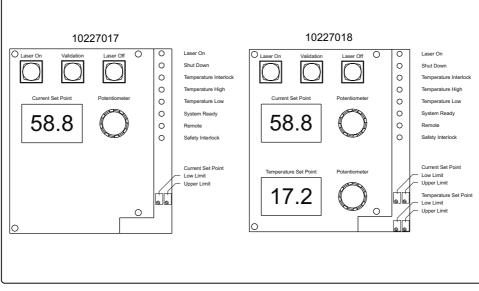

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

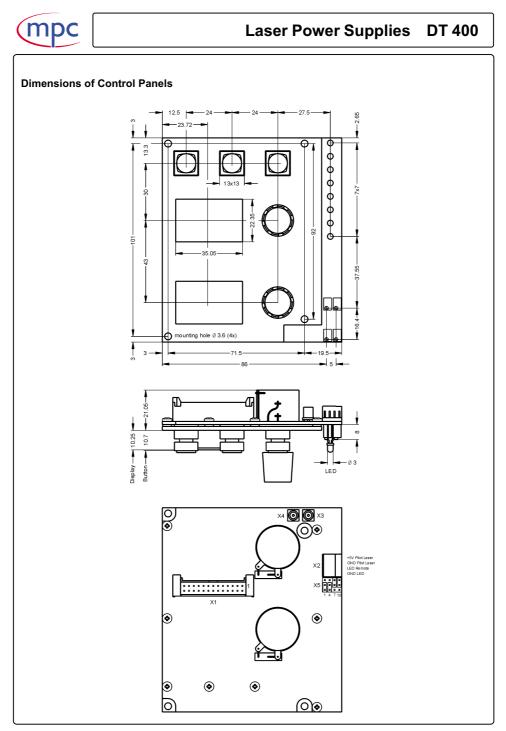

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Interlock Unit 10228002

A safety interlock is required, e.g. if a laser operates in a machine where parts will be inserted or removed manually. In this case laser radiation has to be interrupted immediately and the system must be keep in a safe off-state.

A safe off-state may be achieved by a safety beam shutter, but in most cases there is less space in the optical path.

A better and cost saving way is to switch off the laser power supply and keep it in a safe off-state. Safe off-state means, that the laser power supply must be electrically disconnected, switching off by a digital signal like a shut down or a disable signal is forbidden for a safe operating. It is regulation, that disconnection must be happen by a relay or a switch, the use of semiconductors or electronic switches for disconnecting is not allowed. The properly function of the relay must be supervised in a manner that malfunction does not lead to an unsafe state.

The interlock unit 10228002 complies with regulation and has a lot of additional features for achieving a safe off-state within a very short time. There are two relays, connected in series, a working relay and an emergency relay. The

emergency relay is always closed, the working relay and an emergency relay. The emergency relay is always closed, the working relay acts if an interlock occures. The normally open contact and the normally closed contact of both relays are supervised. If the working relays does not work properly or if there is a failure in the interlock unit, the emergency relays will be de-energized and turns the system in a steady off-state. Every time the mains voltage is turned on, the function of the emergency relays is checked to ensure correct operation. If there is a failure, the system cannot be turned on. Both relays are working currentless for achieving maximum life time.

If an interlock occures, the output for the laser diodes will be short circuited immediately by a semiconductor to ensure that laser radiation will be stopped within a few microseconds. Simultaneously the DT 400 will be turned off and the working relay will be de-energized. At the same time the input capacitors of the DT 400 will be discharged to ensure that no stored energy will cause laser radiation if there is any malfunction.

Also the semiconductor and the circuit for discharging are supervised.

Additionally the interlock unit has an output for a beam shutter. The output is also supervised.

The interlock unit is a open frame component, which is generally mounted beside a vertically mounted DT 400.

The DT 400 to interlock unit connection will be done by mounting kit 10228007, including two connection bolts for mounting at X12 and X14 and four 2,5 qmm wires for connecting at terminal X6.

Laser diodes are connected at X11 and X13. If heatsink 10500882 with printed circuit board 10360347 is used, mounting kit 10228008 including two connecting plates is required. The data connection to the DT 400 will be done by a 25 pole ribbon cable 10385363 at X7. A control panel can be connected at X8 via a 26 pole ribbon cable 10385364. See application 11 and 12 for further information.

If the interlock unit is used in conjunction with control interface 10228003, then this can be fastened directly at the interlock unit's metal plate. In this case take cable 10385359 instead of 10385363 and take cable 10385361 instead of 10385364, this makes wiring easier. For connecting the control interface to the interlock unit, a 26 pole ribbon cable 10385360 is required.

See application 13 and 14 for further information.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Interlock Unit 10228002

Terminals X1 X2 X3 X4

Connection bolts with female thread M3 for connecting the supply voltage for the diode unit and the TEC unit of the DT 400.

Use ring terminals and wires with a cross section of 2,5 qmm.

Termination block X5

Spring-cage 12 pole termination block.

Conductor cross section stranded minimum: 0.2 qmm, maximum: 1.5 qmm.

Inputs			
Pin	Name	Function	
21 23	+Interlock -Interlock	Interlock input Interlock input	
Outp	puts		
Pin	Name	Function	
1	+SV Control Interface	+Supply voltage for a control interface	
3	-SV Control Interface	-Supply voltage fo a control interface	
5	+SV Fan	+Supply voltage for a fan	
7	-SV Fan	-Supply voltage for a fan	
9	+12V Fan	+12V Supply Voltage for a fan	
11	-12V Fan	-12V Supply voltage for a fan	
13	+5V Pilot Laser	+5V Supply voltage for a pilot laser	
15	-5V Pilot Laser	-5V Supply voltage for a pilot laser	
17	-Shutter	- Supply voltage for a shutter	
19	+Shutter	+Supply voltage for a shutter	

Signal description

Interlock pin 21, 23

Input for a positive opening contact. A interlock occures if pin 21 and pin 23 are not interconnected.

Interlock voltage (contact open): 12 V.

Interlock current (contact closed): approx. 1 mA.

For unlocking, a +5 V validation signal of at least a few milliseconds at pin 21 of X8 is required. Generally this will be done by the validation button of the control panels.

SV Control Interface pin 1, 3

Supply voltage for a control interface or suchlike. The voltage is the same like the SV TEC unit. For instance if you have a 24 V power supply, the SV Control Interface voltage will also be 24 V.

SV Fan pin 5, 7

Supply voltage for a fan or suchlike. The voltage is the same like the SV TEC unit. For instance if you have a 24 V power supply for supplying the TEC unit, the SV Fan voltage will also be 24 V.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Interlock Unit 10228002

12V Fan pin 9, 11

12 V supply voltage for a fan or suchlike, the maximum allowed output current is 500 mA if the shutter output is not used or if it is switched to SV TEC Unit.

If the shutter output is switched to 12 V, fan current plus shutter current must not exceed 500 mA.

5V Pilot Laser pin 13, 15


5 V supply voltage for a pilot laser, maximum allowed output current is 200 mA.

Shutter pin 17, 19


Supply voltage for a shutter. The voltage is selectable by jumper X10, either 12 V or the SV TEC Unit voltage. For instance if you have a 24 V power supply for supplying the TEC unit, the shutter voltage will also be 24 V.

If an interlock occures, the shutter output voltage is turned off.

The interlock unit is also available in a modified version, Interlock Unit FP 10228004, for faster pulsing via the pulse modulation or shut down input X4 at the control panel. Rise time is approx. 500 ns and fall time is approx. 7 μ s, the maximum allowed frequency is 5 kHz.

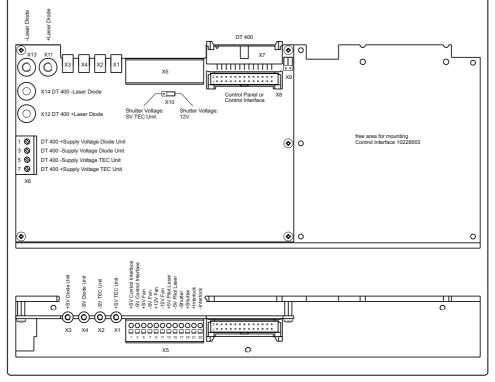

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

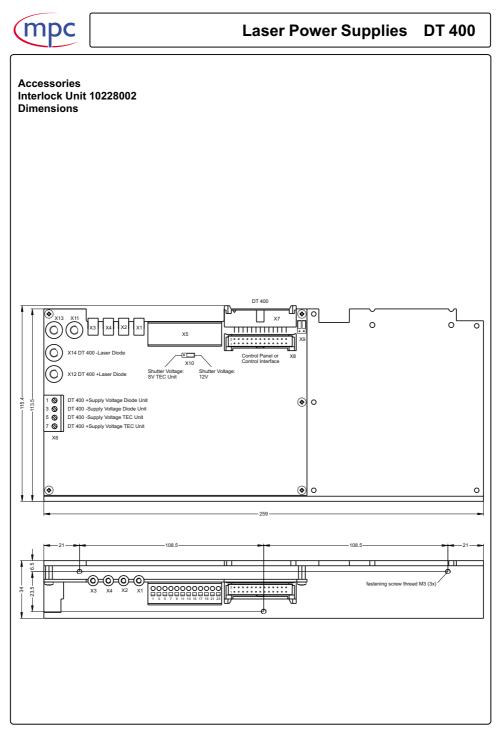

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Interface 10228003

The control interface 10228003 is a microprocessor controlled interface with a control port and a RS 232 port.

Signal levels at the control port meet the common industry standard such as analog levels of 0 ... 10 V for inputs and outputs and digital levels up to 30 V for directly connecting a programmable controller (PLC) or any other controller.

The system can be fully controlled via the control port and fully configured and controlled via the RS 232 port.

The option of system configuring via the RS 232 port and set-up software (requires a PC with Windows™ operating system) makes the system exceptionally flexible.

It is possible to define in both operating modes (local or remote), where the current set point and the temperature set point shall come from, from internal nonvolatile memory, from control port or from a control panel and it is possible to define where the current limit shall come from, from internal nonvolatile memory ore from control port.

Example 1

You can configure a remote controlled system in such a way that it is controlled by a PLC at the control port, but nevertheless the current set point can be adjusted manually at the control panel. The current limit value and the temperature set point is given via the control port or by the internal nonvolatile memory.

This allows remote operating with the possibility of manually correcting manufacturing results.

Example 2

You can configure a local controlled system in such a way that it is manually controlled by the buttons at the control panel, but the current set point or the temperature set point cannot be adjusted manually. This values are given by the internal nonvolatile memory.

The control interface 10228003 is a single printed circuit board with five mounting holes. It can be mounted anywhere.

The mounting holes must be connected to protected earth (PE) for electromagnetic interference reasons.

There is also a mounting kit 10228005 available. In this case the printed circuit board is mounted on a metal plate, it's the same like the interlock unit's plate.

The advantage is that if you have a case with a rear panel which has an opening for the control port and the RS 232 port, the kit can be mounted vertically beside the DT 400 in such a way that the port connectors can be used directly without additional connectors and cables.

The data connection to the DT 400 is be done by a 25 pole ribbon cable 10385365 at X3. A control panel can be connected at X4 via a 26 pole ribbon cable 10385364. See application 9 and 10 for further information.

If the control interface is used in conjunction with the interlock unit 10228002, it can be fastened at the metal plate of the interlock unit. Use mounting kit 10228006, containing 5 distance bolts and 10 screws.

Windows is a registered trademark of the Microsoft Corporation USA

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Interface 10228003


In this case, three ribbon cables are required.

A 26 pole ribbon cable 10385360 for connecting X3 of the control interface to X8 of the interlock unit,


a 25 pole ribbon cable for connecting X7 of the interlock unit to the DT 400 and

a 26 pole ribbon cable 10385361 for connecting X4 of the control interface to a control panel. See application 13 and 14 for further information.

Dimensions

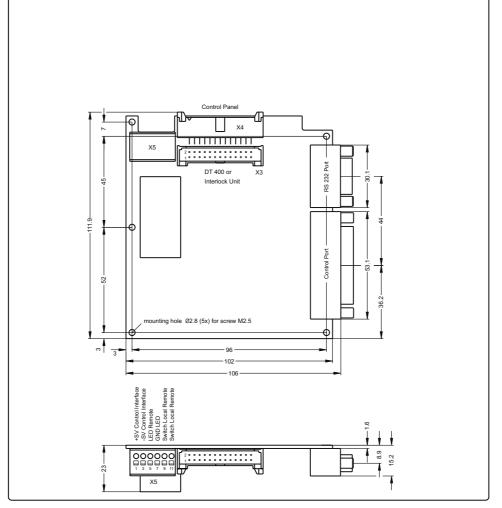


Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

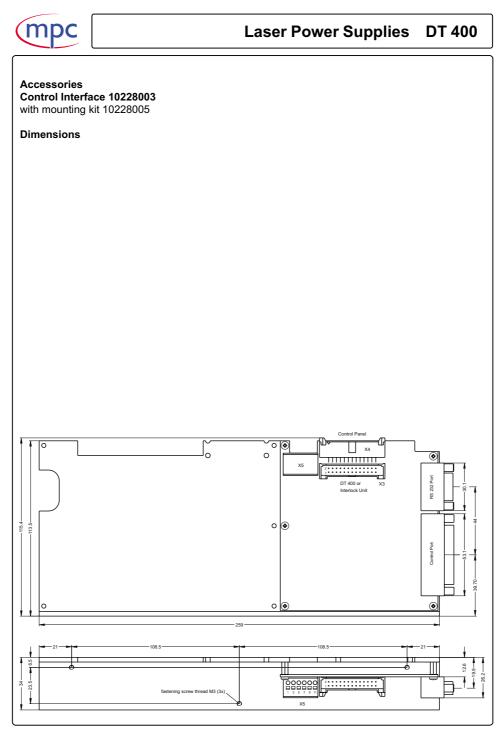

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu



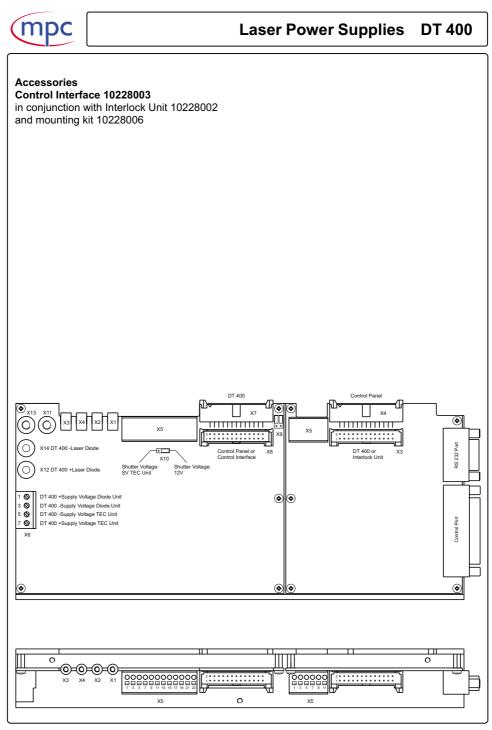

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu



Laser Power Supplies DT 400

Accessories Control Interface 10228003

Termination block X5

Spring-cage 6 pole termination block. Conductor cross section stranded minimum: 0.2 qmm, maximum: 1.5 qmm.

Inputs					
Pin	Name	Function			
1 3 9 11	+SV Control Interface -SV Control Interface Switch Local/Remote Switch Local/Remote	+Suppy voltage -Suppy voltage Switch Local/Remote Switch Local/Remote			
Outp	Outputs				
Pin	Name	Function			
5 7	LED Remote GND LED	LED Remote Anode LED Remote Kathode			

SV Control Interface pin 1, 3

Input for supply voltage. The control interface has an isolated voltage converter on board, this prevents from unwanted ground shifting.

Supply voltage range: 15 V ... 50 V.

If the control interface works in conjunction with the interlock unit, connect the supply voltage inputs to termination block X5 pin 1 and pin 3 at the interlock unit. Otherwise connect the supply voltage inputs to the power supply.

See application 13 and 14 for further information.

Switch Local/Remote pin 9, 11

Input for a local/remote switch, open contact means local, closed contact means remote.

LED Remote pin 5, 7

Open emitter output for a LED, indicating remote operating mode. A LED can directly be connected, use a resistor of 220 Ohm in series.

If the control interface works in conjunction with a control panel 10227013, 10227014, 10227017 or 10227018, the LED Remote and the LED GND must be connected to termination block X2 at the control panel for indicating remote status. In this case a resistor is not required.

Header X3 and X4

X3, 26 pole header for connecting to DT 400 or to Interlock Unit 10228002. X4, 26 pole header for connecting to a control panel.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mp	C		Laser Power	Supplies	DT 400
Accessories Control Interface 10228003 Control Port 25-pole female plug connector according to DIN 41652 and MIL-C-24308, female thread UNC 4-40. CA=Control Data Analog CD=Control Data Digital SA=Status Data Analog SD=Status Data Digital					<u></u>
	Input	S			
	Pin	Name	Function		
	15 2 3 6 19 7 1	CA-DCSP CA-DCL CA-PTSP CD-DCON CD-DCSD CD-PSD GND GND	Diode Current Set Point Diode Current Limit Peltier Temperature Set Point Diode Current On Diode Current Shut Down Peltier Voltage Shut Down Signal Ground Signal Ground		
	Outp	uts	1		
	Pin	Name	Function		
	4 16 17 5 18 24 12 25 13 23 8 20 21 9 22 10 11 1 1	SA-DCACT SA-DCSPLIM SA-DVACT SA-DPEACT SA-PTACT REF AUX+5V AUX+15V AUX-15V SD-READY SD-DCON SD-DCSD SD-PTL SD-PTH SD-PTI SD-SIL SD-REM GND GND	Diode Current Actual Diode Current Set Point Limited Diode Voltage Actual Diode Power Electrically Actual Peltier Temperature Actual Reference Voltage Auxiliary Voltage +5 V Auxiliary Voltage +15 V Auxiliary Voltage -15 V Ready Diode Current On Diode Current Shut Down Peltier Temperature Low Peltier Temperature High Peltier Temperature Interlock Safety Interlock Remote Signal Ground Signal Ground		

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

 \odot

Control Port

 \odot

Accessories

Control Interface 10228003 **Control Port**

Signal Description

CA-DCSP

Control Analog - Diode Current Set Point Analog input 0 ... +10.000 V for the current set point. +10.000 V corresponds to the maximum output current of the DT 400.

CA-DCL

Control Analog - Diode Current Limit Analog input 0 +10.000 V for the diode current limit. +10.000 V corresponds to the maximum output current of the DT 400. The diode current limit value is defined either by the value of the CA-DCL signal, the value of the nonvolatile memory (setup software), the value of the RS 232 software or by the setting of the diode current limit potentiometer at the DT 400. Turn current limit potentiometer at the DT 400 clockwise to it's maximum value if you would like to define the current limit value by the CA-DCL signal, by memory or by RS 232.

CA-PTSP

Control Analog - Peltier Temperature Set Point

Analog input 0 +10.000 V for a peltier temperature of 0 ... +50 °C.

The peltier temperature set point is defined either by the value of the CA-PTSP signal, the value of the nonvolatile memory (setup software), the value of the RS 232 software or by the setting of the temperature set point potentiometer at the DT 400.

Turn temperature set point potentiometer at the DT 400 counterclockwise to it's minimum value if you would like to define the temperature set point by the CA-DCL signal, by memory or by RS 232.

CD-DCON

Control Digital - Diode Current On Digital input, active high. High turns diode current on, low turns off.

CD-DCSD

Control Digital - Diode Current Shut Down Digital input, active high or active low, depends on configuration by setup software. Disables diode current.

CD-PSD

Control Digital - Peltier Voltage Shut Down Digital input, active high. High turns the peltier voltage off.

SA-DCACT

Status Analog - Diode Current Actual Analog output 0 ... +10.000 V, reflects the actual diode current.

SA-DCSPLIM

Status Analog - Diode Current Set Point Limited Analog output 0 ... +10.000 V, reflects the actual diode current set point, limited by the diode current limit value. The diode current limit value may be the CA-DCL signal, the value of the

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

 \odot

Control Port

 \odot

Accessories Control Interface 10228003 Control Port

nonvolatile memory (setup software), or the setting of the diode current limit potentiometer at the DT 400.

SA-DVACT

Status Analog - Diode Voltage Actual Analog output 0 ... +10.000 V, reflects the actual diode voltage. +10.000 V corresponds to a diode voltage of +25.000 V.

SA-DPEACT

Status Analog - Diode Power Electrically Actual Analog output 0 ... +10.000 V, reflects the actual electrically diode power. +10.000 V corresponds to a diode power of 500 W.

SA-PTACT

Status Analog - Peltier Temperature Actual Analog output 0 ... +10.000 V, reflects the actual peltier temperature. 0 ...+10.000 V corresponds to a peltier temperature of 0 ... +50 °C.

REF

Analog output +5.000 V, \pm 0.1 %, output impedance is 100 Ω .

AUX+5V Auxiliary voltage +5.1 V, maximum allowed current is 200 mA.

AUX+15V

Auxiliary voltage approx. +15 V, maximum allowed current is 100 mA.

AUX-15V

Auxiliary voltage approx. -15 V, maximum allowed current is 100 mA.

SD-READY

Status Digital - Ready Digital output, open collector, active low. Low, if there are no errors and if the system is ready.

SD-DCON

Status Digital - Diode Current On Digital output, open collector, active low. Low, if the diode current is turned on.

SD-DCSD

Status Digital - Diode Current Shut Down Digital output, open collector, active low. Low, if the diode current shut down is active.

SD-PTL

Status Digital - Peltier Temperature Low Digital output, open collector, active low. Low, if the peltier temperature is too low.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

 \odot

Accessories Control Interface 10228003 Control Port

Control Port

 \bigcirc

SD-PTH

Status Digital - Peltier Temperature High Digital output, open collector, active low. Low, if the peltier temperature is too high.

SD-PTI

Status Digital - Peltier Temperature Interlock

Digital output, open collector, active low. Low, if there is a peltier temperature interlock. A peltier temperature interlock means, that the peltier temperature has exceeded

the temperature supervision value due to excessive temperature.

would like to define the supervision value by the setup software.

The temperature supervision value is defined either by the value of the nonvolatile memory (setup software), or by the setting of the temperature interlock potentiometer at the DT 400. Turn temperature interlock potentiometer at the DT 400 clockwise to it's maximum value, if you

SD-SIL

Status Digital - Safety Interlock Digital output, open collector, active low. Low, if an interlock occured.


SD-REM

Status Digital - Remote Digital output, open collector, active low. Low, if the system works in the remote operating mode.

Digital signal levels

All digital inputs can be operated by TTL, CMOS or any other logic levels up to +30 V. All digital outputs can drive up to 20 mA, the maximum permitted voltage is +30 V.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

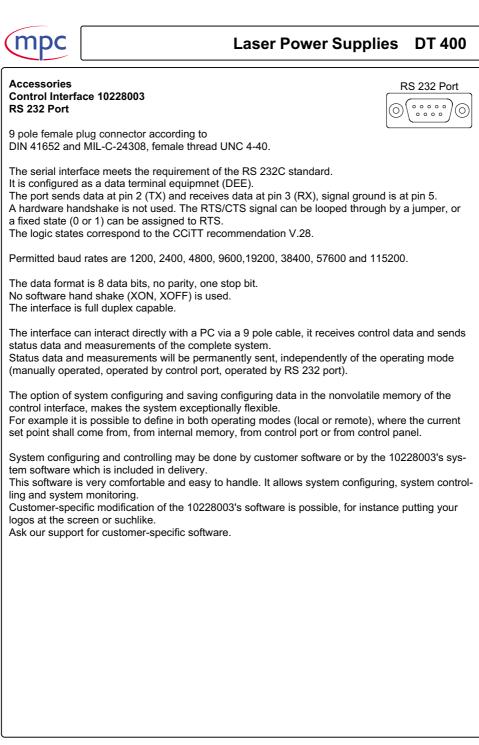

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories Control Interface 10228003, RS 232 Port System software 10228003, Set Up



Install the 10228003's software and connect a PC at the RS 232 port. Turn on your system, start the program and select Set Up for configuring your system. Enter the required values at the Set Up panel, this values will be stored in the nonvolatile memory of the control interface and will be relevant if memory is selected as a data source in the local or remote mode.

The Diode Voltage Limit value does not really affect the output voltage of the DT 400, it is a supervision value which leads to a warning if exceeded. This is useful for detecting bad laser diodes or bad contacts at the output lines.

For the TEC Temperature Interlock and the TEC Interlock Time Out, do not select low values. Consider that in most cases a thermal overshoot will occur if the system is turned on. Select whether the TEC Interlock Control shall be active or not. If you select active, the system will be turned off after the TEC interlock time if there is excessive TEC temperature.

Select Shut Down Signal Polarity Low or High. If you select High, the diode current will be shut down if the shut down signal is High.

Press the Confirm button, the values will be stored in the memory of the control interface.

	LS 400-50 Serial Number: 0000	Control Status 0	
Start Window	Monitor	RS232 Control	Set Up
Stored Values Diode Current Limit Diode Current Set Point Diode Voltage Limit TEC Temperature Interlock TEC Temperature Set Point TEC Interlock Time Out TEC Interlock Control active Shut Down Signal Polarity	0,0050,00 A 0,0050,00 A 0,0025,00 V 0,0050,00 °C 0,0050,00 °C 0,0655,3 s O Low (High C	Set Up Panel Diode Current Limit Diode Current Set Point Diode Voltage Limit TEC Temperature Interlock TEC Temperature Set Point TEC Interlock Time Out TEC Interlock Control active	0,000 0,0050,00 A 0,000 0,0050,00 A 0,000 0,0025,00 V 0,000 0,0050,00 °C 0,000 0,0050,00 °C 0,000 0,0050,00 °C 0,000 0,00655,3 s Confirm
LOCAL Diode Current Limit Temp. Set Point Diode Current Limit Temp. Set Point Memory Control Port Memory Control Port Memory Memory Memory Memory Control Port Memory Control Port Control P			


Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

INDC

local operating mode.

Laser Power Supplies **DT 400**

Accessories Control Interface 10228003, RS 232 Port System software 10228003, Set Up

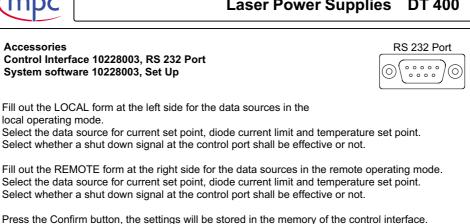

💷 Laser System LS 400-50 - Set Up - 🗆 × <u>File Com</u> Features <u>?</u> LS 400-50 Control Status Serial Number: 00000 Set Up Start Window Monitor RS232 Control Stored Values Set Up Panel-0,00...50,00 A **Diode Current Limit** 0,00...50,00 A Diode Current Limit 0,000 Diode Current Set Point 0,00...50,00 A Diode Current Set Point 0,000 0,00...50,00 A Diode Voltage Limit 0,00...25,00 V Diode Voltage Limit 0,000 0,00...25,00 V TEC Temperature Interlock 0,00...50,00 °C 0.000 0.00...50.00 °C TEC Temperature Interlock 0,00...50,00 °C TEC Temperature Set Point TEC Temperature Set Point 0,000 0,00...50,00 °C TEC InterlockTime Out 0,0...655,3 s TEC Interlock Control active \circ TEC Interlock Time Out 0,0 0,0...655,3 s TEC Interlock Control active Г Confirm Shut Down Signal Polarity Low (• High 🔘 LOCAL REMOTE Current Set Point - Diode Current Limit Temp. Set Point Current Set Point – Diode Current Limit Temp. Set Point Memory C Memory C C C Memory Memory Memory Memory C Ċ c Control Port Control Port Control Port O Control Port Control Port C Control Port Enable Shut Down -Enable Shut Down Control Panel Control Panel Control Panel Control Panel Control Port Control Port Г Г Receive Status Panel Communication : No communication O
O
O
O
O
O
O
Safetv Re- Svstem TEC Temperature
IL mote Readv Low High IL Baudrate OO Shut Laser Down On Ó Operating Time : E<u>x</u>it **Diode Operating Time:**

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc		Laser Power	Supplies	DT 400
	ace 10228003, RS 232 Port are 10228003, Set Up		R	S 232 Port
operating mode have analog ou	Set Up: er system which shall be operate e there is a programmable logic utputs. Your laser has one diode 3,50 A and temperature set poin	controller (PLC) at the , the diode current sha	control port wh	ich does'nt
	erating mode, the current set poi sperimentation, a High shut dow de current.			
At the Set Up p enter 45,00 A f	ystem, start the program and se vanel enter 46,50 A for the diode or the diode current, r the diode voltage limit.		ring your syster	n.
enter 24,30 °C enter 10,0 s for	for the TEC temperature interlo for the temperature set point, the TEC interlock time out. erlock control active.	ck,		
Select Shut Do	wn Signal Polarity High at the le	ft side.		
Select Control select Memory select Control F	CAL form at the left side for the of Panel for the current set point, for the diode current limit, Panel for the temperature set po Shut Down Control Port.		al operating mo	de.
Select Memory select Memory select Memory	MOTE form at the right side for the for the current set point, for the diode current limit, for the temperature set point. Shut Down Control Port.	ne data sources in the	remote operatii	ng mode.
Press the Conf system is ready	irm button, the settings will be s y for operating.	cored in the memory of	f the control inte	erface and the

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc				L	aser Pow	er Sup	plies	DT 400
Accessories Control Interfa System softwa				rt			0	RS 232 Port
Example for a S	Set Up							
Ele Com Featur		iet Up						
			400-50 ial Number:	: 0000		ntrol Status		
	/indow		Monitor		R\$232 Co	ontrol	S	et Up
Stored Values Diode Current L Diode Current S Diode Voltage L TEC Temperatu TEC Temperatu TEC Interlock Ti TEC Interlock C	et Point .imit re Interlock re Set Point me Out	0	0,005 0,002 0,002 0,005 0,005 0,065	0,00 A 5,00 V 0,00 °C 0,00 °C	Set Up Panel Diode Current Limi Diode Current Set Diode Voltage Lim TEC Temperature TEC Temperature TEC Interlock Tim	Point it Interlock Set Point	46,50 45,00 2,50 30,00 24,30 10	0,0050,00 A 0,0050,00 A 0,0025,00 V 0,0050,00 °C 0,0050,00 °C 0,0655,3 s
Shut Down Sign	al Polarity L	.ow O		High 🕫	TEC Interlock Con	trol active	V	<u>C</u> onfirm
LUCAL Current Set Poir Memory Control Port Control Panel	Diode Curre Memory Control Port	ent Limit C ut Down	Temp. So Memory Control Po Control Pa	et Point O ort O	Current Set Point Memory Control Port C Control Port C Control Panel C	Diode Curren Memory Control Port Enable Shut Control Port		Temp. Set Point Memory © Control Port © Control Panel ©
Communication : No Operating Time : Diode Operating Tir		Receiv	audrate	Status Pa	System TEC Tem	nperature Sh) () nut Laser own On	E <u>x</u> it

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc Laser Power Supplies **DT 400** RS 232 Port Accessories Control Interface 10228003, RS 232 Port 0 0 0 0 0 0 0 0 0 0 System software 10228003, RS 232 Control Select RS 232 Control for controlling the system by your PC. Enter the required values for diode current limit, diode current set point and TEC temperature set point at the RS 232 Control Panel. Select the data source for diode current limit, diode current set point and TEC temperature set point. Select whether a shut down signal at the control port shall be effective or not. If you select RS 232 for diode current limit, diode current set point and TEC temperature set point, the registered values at the RS 232 Control Panel will be relevant at operating. In other cases this values will be ignored. If you select Memory as a data source, the value registered in the memory (set up) will be relevant at operating. If you select Control Panel as a data source, the setting of the potentiometer at the control panel will be relevant at operating. If you select Control Port as a data source, the analog set point signal fed in at the control port will be relevant at operating, e.g. the diode current set point signal CA-DCSP. Every time you alter a value or a setting, you have to press the Confirm button. There are three buttons for operating, button ON, button OFF and TEC Shut Down. Button ON turns the laser on, button OFF turns the laser off. The button TEC Shut Down turns the TEC voltage off, this is useful for equipment testing. Laser System LS 400-50 - RS232-Control <u>File Com</u> Features <u>?</u> LS 400-50 Control Status Serial Number: 00000 RS232 Control Start Window Set Up Monitor Diode Current Actual -RS232 Control Panel TEC Control On 48,00 0,00...50,00 A Diode Current Limit 0 Set Point Limited 0 50 A Diode Current Set Point 50,00 0,00...50,00 A Time Out Diode Voltage Actual 327,6 TEC Temperature Set Point 16,00 0,00...50,00 °C RS232-0 Set Point Limited 25VControl On Confirm ON Diode Electrically Power Ω Time Out E. Diode Current Limit Enable Shut Down 0 $500\,\mathrm{W}$ RS232 Send Interval Peltier Temperature Actual œ Memory Control Port 🔽 Control Port C 0 Temperature Set Point TEC Interlock Limit 50 °C 0 Current Set Point TEC Temperature Set Point RS232 œ RS232 TEC Memory C Memory Shut Control Port Control Port œ C Down Control Panel C Control Panel C Status Panel -Receive

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Ó

Baudrate

Safetv Re-Svstem TEC Temperature IL mote Readv Low High IL

 \cap 0

Shut Laser Down On

Communication : No communication

Operating Time :

Diode Operating Time:

Page 65

Exit

Laser Power Supplies DT 400

Accessories Control Interface 10228003, RS 232 Port Software Protocol



Status Data

Status data are splitted in three packets.

Packet P1 informs about measured values, current operating states and working hours. Packet P2 informs about data from control port and control panel. Packet P3 informs about stored data.

The short name of the data contains a data source number according to its origin.

Data source	data source number
DT 400	1
Control Port	2
Control Panel	3
Memory	4
RS232 Port	5
Control Interface	6

Control Byte SD6CON

Status Digital 6 Control Packet P1, Packet P2 and Packet P3, respectively Byte 3. Reflects the current state of the control byte CD6CON. Contains the following status bits:

Reset Diode Working Hours SB6RDWH

Status Bit 6 Reset Diode Working Hours Byte 3, Bit 1 Reflects that the counter for the operating hours will be resetted. Reset will be done by control bit CB5RDWH with data source number 5.

Power Supply On SB6PSON

Status Bit 6 Power Supply On Byte 3. Bit 2

Reflects that the DT 400 is in an on-state. On will be done by control bit CB5PSON of the RS 232 port and /or by a CD-DCON signal at the control port or in the manual mode by a "ON" keystroke at the control panel.

TEC Shut Down SB6TSD

Status Bit 6 TEC Shut Down Byte 3, Bit 4 Reflects that the TEC output is shut down. A TEC shut down will be done by control bit CB5TSD of RS 232 port or by a CD-PSD signal at the control port.

Reboot Firmware SB6REBOOT


Status Bit 6 Reboot Byte 3, Bit 5 Reflects that a restart of the control interface was activated. A restart will be done by

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories

Control Interface 10228003, RS 232 Port Software Protocol



control bit CB5REBOOT of the RS 232 port. A restart is required if the system will be new configured.

Data Store SB6STORE Status Bit 6 Store

Byte 3, Bit 6 Byte 3, Bit 6 Reflects that the data will be saved. Control bit CB5STORE must be set in the configuration data set for saving data.

CD-DCON signal at the control port SB6CPPSON

Status Bit 6 Control Port Power Supply On Byte 3, Bit 7 Reflects that the CD-DCON signal at the control port is High for turning on the DT 400.

Operating mode SD6OM

Status Digital 6 Operating Mode Packet P1, Packet P2 und Packet P3, respectively Byte 4. Reflects the current state of control.

Operating Mode RS 232 SB6OMRS

Status Bit 6 Operating Mode RS 232 Byte 4, Bit 1 Reflects that the control interface is controlled by RS232.

Remote Mode Active SB6REM

Status Bit 6 Remote Mode Byte 4, Bit 2 Reflects that the remote mode of the control interface is active.

TEC Shut Down Active SB6TSDA

Status Bit 6 TEC Shut Down Active Byte 4, Bit 4 Reflects that the TEC shut down is active.

Receive RS 232 SB6RRS

Status Bit 6 Receive RS 232 Byte 4, Bit 6 Reflects that the control interface has received a byte from the RS 232 port.

Data Source Decoder SD6DEC Status Digital 6 Data Source Decoder

Packet P1, Packet P2 und Packet P3, respectively Byte 5. Reflects the current assignments of the data sources.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories

Control Interface 10228003, RS 232 Port Software Protocol



Data Source Decoder Local Mode SD4DECLOC

Status Digital 4 Data Source Decoder Local Packet P3, Byte 23 Reflects the settings of the decoder, which were configured with configuration byte CF5DECLOC and were stored. The settings of the decoder will be loaded from memory during local mode starting procedure.

Data Source Decoder Remote Mode SD4DECREM

Status Digital 4 Data Source Decoder Remote Packet P2, Byte 23 Reflects the settings of the decoder, which were configured with configuration byte CF5DECREM and were stored.

The settings of the decoder will be loaded from memory during remote mode starting procedure.

In Out Control SD6IOC

Status Digital 6 In Out Control Packet P1, Packet P2 und Packet P3, respectively Byte 6. Reflects the settings of bits and contains the code of status data sets (transmit) and control data sets (receive). The code is mandatorily required.

Control Port Shut Down Enable SB6CPSDE

Status Bit 6 Control Port Shut Down Enable Byte 6, Bit 0 Reflects whether the shut down signal CD-DCSD at the control port is effective or not.

Shut Down Polarity Positive SB6SDPOLP

Status Bit 6 Shut Down Polarity Positive Byte 6, Bit 2

Reflects whether a High shut down signal or a Low shut down signal results in a shut down. If bit 2 is 0, a Low signal results in a shut down, if bit 2 is 1, a High signal results in a shut down. This bit is effective in all control modes.

Temperature Control On SB6TCON

Status Bit 6 Temperature Control On Byte 6, Bit 3

Reflects whether a temperature interlock is effective or not. If temperature interlock is active and an excessive temperature occures, the diode current will be turned off and error bit EB6TF will be set. This bit is effective in all control modes.

Code of received data sets Byte 6 Bit 5 Bit 4

/te 6	Bit 5 Bit 4	Data set name
	0 0	Control data set
	0 1	Configuration data set
	1 0	Unused
	1 1	Short control data set

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories

Control Interface 10228003, RS 232 Port Software Protocol



Code of transmitted data setsByte 6Bit 7Bit 6D

Bit 7	Bit 6	Data set name
0	0	Status data set packet 1
0	1	Status data set packet 2
1	0	Status data set packet 3
1	1	Unused

In Out Control Local SD4IOCLOC

Status Digital 4 In Out Control Local Packet P3, Byte 24. Reflects whether the shut down signal CD-DCSD at the control port is effective in the local mode or not. The setting is stored in SD4CPSDEL. The other bits aren't significant.

In Out Control Remote Mode SD4IOCREM

Status Digital 4 In Out Control Remote Packet P2, Byte 24. Reflects whether the shut down signal CD-DCSD at the control port is effective in the remote mode or not. The setting is stored in bit SD4CPSDER. The other bits aren't significant.

Error bits

Packet P1 in byte 8 and in byte10, respectively in the upper half byte.

Temperature Limit EB6TL

Error Bit 6 Temperature Limit Packet P1, Byte 8, Bit 4 Bit 4 will be set if theTEC temperature interlock value will be exceeded. The diode current will be turned off.

RS 232 Data Fail EB6DFAIL

Error Bit 6 Data Fail Packet P1, Byte 8, Bit 5 Bit 5 will be set if there is a data transfer error at the RS 232 port.

RS 232 Time Out EB6TOUT

Error Bit 6 Time Out Packet P1, Byte 8, Bit 6 Bit 6 will be set if the RS 232 port doesn't receive data within the Time Out time. The diode current will be switched off. Bit 6 will be resetted if data will be received again, however the diode current remains in an off-state.

RS232 Wrong Sign EB6WS

Error Bit 6 Wrong Sign Packet P1, Byte 8, Bit 7 Bit 7 will be set if a wrong character will be received. Bit 7 will be resetted if valid characters will be received again.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

RS 232 Port

0 0 0 0 0 0 0 0 0

(0)

(0)

Accessories Control Interface 10228003, RS 232 Port Software Protocol

Hardware Fault EB6HFAIL Error Bit 6 Hardware Fault Packet P1, Byte 10, Bit 4

Bit 4 will be set if there is a hardware fault.

Voltage Limit EB6VL

Error Bit 6 Voltage Limit Packet P1, Byte 10, Bit 6 Bit 6 will be set if the diode voltage exceeds the diode voltage supervision value. Bit 6 will be resetted if the diode voltage is lower than the diode voltage supervision value.

Decoder Fail EB6DECF

Error Bit 6 Data Source Decoder Fail Packet P1, Byte 10, Bit 7 Bit 7 will be set if the data source decoder gets an invalid value. In this case the diode current cannot be turned on.

Operating mode bits Packet P1 in byte 8 and in byte10, respectively in the upper half byte.

TEC Temperature Low SB6PTL Status Bit 6 Peltier Temperature Low Packet P1, Byte 12, Bit 4 Bit 4 will be set if the current TEC temperature is lower than the temperature set point.

TEC Temperature High SB6PTH

Status Bit 6 Peltier Temperature High Packet P1, Byte 12, Bit 5 Bit 5 will be set if the current TEC temperature is higher than the temperature set point.

Shut Down Active SB6SDA

Status Bit 6 Shut Down Active Packet P1, Byte 12, Bit 6 Bit 6 will be set if a shut down is active.

Power Supply On SB6PSONA

Status Bit 6 Power Supply On Packet P1, Byte 12, Bit 7 Bit 7 will be set if the DT 400 is turned on.

Power Supply Ready SB6PSR

Status Bit 6 Power Supply Ready Packet P1, Byte 14, Bit 4 Bit 4 will be set if the DT 400 is ready for operating.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

RS 232 Port

0 0 0 0 0 0 0 0 0

(0)

 $(\bigcirc$

Accessories Control Interface 10228003, RS 232 Port Software Protocol

Interlock Active SB6ILA Status Bit 6 Interlock Active Packet P1, Byte 14, Bit 5 Bit 5 will be set if the safety interlock is active.

Local Mode SB6LOCAL

Status Bit 6 Local Mode Packet P1, Byte 14, Bit 6 Bit 6 will be set if the system operates in the local mode.

Temperature Interlock Active SB6TILA

Status Bit 6 Temperature Interlock Active Packet P1, Byte 14, Bit 7 Bit 7 will be set if a TEC temperature interlock is active.

Baud Rate SD6BR

Status Digital 6 Baud Rate Packet P1, Byte 16, upper half byte Reflects a numerical value, corresponding to the baud rate.

Numerical value	baud rate
4	1000

1	1200
2	2400
3	4800
4	9600
5	19200
6	38400
7	57600
8	115200

Working Hours SD6WH

Status Digital 6 Working Hours Packet P1, Byte 17, 18, 19 und 20 Reflects the operating hours of the control interface.


Diode working Hours SD6DWH

Status Digital 6 Diode Working Hours Packet P1, Byte 21, 22, 23 und 24 Reflects the diode operating hours. The counter reading can be resetted by control bit CB5RDWH.

Revision Number SD6REV

Status Digital 6 Revision Number (of firmware) Packet P2, Byte 8, upper half byte, first digit is SD6REV1 Packet P2, Byte 10, upper half byte, second digit is SD6REV2 Packet P2, Byte 12, upper half byte, third digit is SD6REV3 Packet P2, Byte 14, upper half byte, fourth digit is SD6REV4 For the half bytes, only values of 0 to 9 are permitted.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

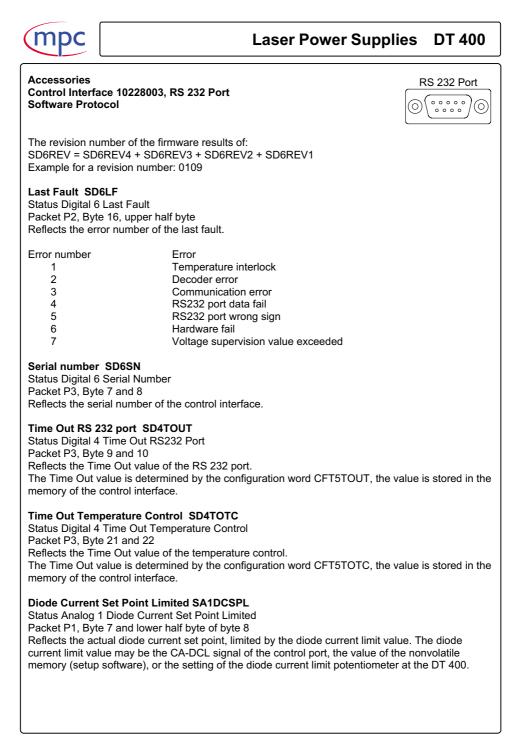

Laser Power Supplies DT 400

RS 232 Port

0 0 0 0 0 0 0 0 0

(0)

Ó

Accessories Control Interface 10228003, RS 232 Port Software Protocol

Diode Current Actual SA1DCACT Status Analog 1 Diode Current Actual Packet P1, Byte 9 and lower half byte of byte10 Reflects the actual diode current.

Diode Voltage Actual SA1DVACT Status Analog 1 Diode Voltage Actual Packet P1, Byte 11 and lower half byte of byte12 Reflects the actual diode voltage.

Diode Current Set Point 2 SA3DCSP2

Status Analog 3 Diode Current Set Point 2 Packet P1, Byte 13 and lower half byte of byte14 Reflects the diode current set point signal at X3 of a control panel. Not implemented.

TEC Temperature Actual SA1PTACT

Status Analog 1 Peltier Temperature Actual Packet P1, Byte 15 and lower half byte of byte16 Reflects the actual TEC temperature.

Diode Current Limit SA2DCL

Status Analog 2 Diode Current Limit Packet P2, Byte 7 and lower half byte of byte 8 Reflects the diode current limit signal CA-DCL at the control port.

Diode Current Set Point SA2DCSP

Status Analog 2 Diode Current Set Point Packet P2, Byte 11 and lower half byte of byte 12 Reflects the diode current set point signal CA-DCSP at the control port.

TEC Temperature Set Point SA2PTSP

Status Analog 2 Peltier Temperature Set Point Packet P2, Byte 17 and lower half byte of byte 18 Reflects the Peltier temperature set point signal CA-PTSP at the control port.

Diode Current Set Point SA3DCSP

Status Analog 3 Diode Current Set Point Control Panel Packet P2, Byte 13 and lower half byte of byte 14 Reflects the diode current set point of a control panel.

TEC Temperature Set Point SA3PTSP

Status Analog 3 Peltier Temperature Set Point Control Panel Packet P2, Byte 19 and lower half byte of byte 20 Reflects the Peltier temperature set point of a control panel.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu



Laser Power Supplies DT 400

Accessories Control Interface 10228003, RS 232 Port Software Protocol

RS 232 Port

Diode Current Set Point SD4DCSP Status Digital 4 Diode Current Set Point Memory Packet P2, Byte 15 and lower half byte of byte 16 Packet P3, Byte 11 and lower half byte of byte 12 Reflects the diode current set point stored in the memory.

Diode Current Limit SD4DCL

Status Digital 4 Diode Current Limit Memory Packet P2, Byte 9 and lower half byte of byte 10 Packet P3, Byte 13 and lower half byte of byte 14 Reflects the diode current limit stored in the memory.

TEC Temperature Set Point SD4PTSP

Status Digital 4 Peltier Temperature Set Point Memory Packet P2, Byte 21 and lower half byte of byte 22 Packet P3, Byte 15 and lower half byte of byte 16 Reflects the Peltier temperature set point stored in the memory.

TEC Temperature Interlock CD4PTL

Control Digital 4 Peltier Temperature Interlock Packet P3, Byte 17 and lower half byte of byte 18 Reflects the Peltier temperature interlock value stored in the memory.

Diode Voltage Limit CD4DVL

Control Digital 4 Diode Voltage Limit Memory Packet P3, Byte 19 and lower half byte of byte 20 Reflects the diode voltage limit value stored in the memory.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories

Control Interface 10228003, RS 232 Port Software Protocol



Transmitted data

Independently of configuration, operating mode and interface, status data will be transmitted cyclically at the RS 232 port. For a better data management, the status data are packed into 3 data packets. Each of these packets consists of 26 bytes. Packet P1 contains measurements, current operating states and operating hours. Packet P2 contains data of the control port and data of the control panel. Packet P3 contains data stored in the memory. The separation of data packets offers the possibility for transmitting only packets whose contents have changed, resulting in a shorter cycle time. The basic version however doesn't have this feature. A packet consists of: 2 Byte Start of data set 22 Byte Status data bytes End of data set 2 Byte Status data packet overview Packet P2 Packet P3 Packet P1 Byte 1 Start byte Start byte Start byte Byte 2 Start byte Start byte Start byte Byte 3 SD6CON SD6CON SD6CON Byte 4 SD6OM SD6OM SD6OM Byte 5 SD6DEC SD6DEC SD6DEC Byte 6 SD6IOC SD6IOC SD6IOC Byte 7 SA1DCSPL SA2DCL SD6SN Byte 8 Error Bits SD6REV1 SD6SN Byte 9 SA1DCACT SD4DCL SD4TOUT Byte 10 Error Bits SD6REV2 Byte 11 SA1DVACT SA2DCSP SD4DCSP Operating mode bits SA3DCSP2 Byte 12 SD6REV3 Byte 13 SA3DCSP SD4DCL Byte 14 Operating mode bits SD6REV4 Byte 15 SA1PTACT SD4DCSP SD4PTSP Byte 16 SD6BR SD6LF SA2PTSP Byte 17 SD6WH SD4PTL Byte 18 SD6WH Byte 19 SD6WH SA3PTSP SD4DVL Byte 20 SD6WH SD6DWH SD4PTSP SD4TOTC Byte 21 Byte 22 SD6DWH Byte 23 SD6DWH SD4DECREM SD4DECLOC Byte 24 SD6DWH SD4IOCREM SD4IOCLOC Byte 25 Stop byte Stop byte Stop byte Byte 26 Stop byte Stop byte Stop byte

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 Ó **Description packet P1** Packet P1 contains measurements, current operating states and operating hours. Packet P1 status byte 1 start byte start byte Packet P1 status byte 2 For starting the sequence a start byte will be send twice. The start byte must have a hexadecimal value of "0A" or a binary value of "0000 1010". control byte SD6CON Packet P1 status byte 3 8 bit word, binary output, reflects the current operating state. Bit 0 Unused. Bit 1 = 1 SB6RDWH Counter for diode operating hours is reset. SB6PSON DT 400 is in on-state. Bit 2 = 1 Bit 3 Unused. Bit 4 = 1 SB6TSD TEC shut down is active. SB6REBOOT Bit 5 = 1System reboot was triggered. Bit 6 = 1SB6STORE Data are saved. Bit 7 = 1 SB6CPPSON DT 400 is turned on by CD-DCON-signal at the control port. operating state byte SD6OM Packet P1 status byte 4 8 bit word, binary output, reflects the current operating mode. Bit 0 Unused. Bit 1 = 1 SB60MRS RS232 port is used for control. Bit 2 Unused. SB6REM Remote mode is active. Bit 3 = 1 Bit 4 = 1 SB6TSDA TEC shut down is active. Bit 5 Unused. SB6RRS Data were received of RS 232 port. Bit 6 = 1 Bit 7 Unused. Packet P1 status byte 5 data source decoder SD6DEC 8 bit word, binary output, reflects the data source assignments. Bit 1 Bit 0 0 0 The diode current limit value is given by RS 232 port. 0 1 The diode current limit value is given by memory. 0 The diode current limit value is given by control port. 1 Bit 4 Bit 3 Bit 2 The diode current set point is given by RS 232 port. 0 0 0 0 0 1 The diode current set point is given by memory. 0 The diode current set point is given control port. 0 1 0 0 The diode current set point is given by control panel. 1

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc		Laser Power Suppli	es DT 400	
Accessorie Control Inte Software Pr	erface 10228003,	RS 232 Port	RS 232 Port	
0 0 0 0	0 The TEC 1 The TEC 0 The TEC	temperature set point is given by RS 232 port. temperature set point is given by memory. temperature set point is given by control port. temperature set point is given by control panel.		
Other setting	gs lead to a decod	er fault, error bit EB6DECF will be set.		
8 bit word, b	status byte 6 inary output, refle s with bit 6 and bit	in out control SD6IOC cts the settings of the status bits and defines the 7.	packet	
Bit 1 Bit 2 = 1 S	SB6CPSDE SB6SDPOLP SB6TCON	Shut down signal of control port approved. Unused. Shut down signal polarity is positive. Temperature interlock control is active. Unused. Unused. Must be 0. Must be 0.		
Packet P1 status byte 7 Packet P1 status byte 8 SA1DCSPL diode current set point limited SA1DCSPL Error bits 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Reflects the actual diode current set point, limited by a diode current limit value. A diode current limit value may be the CA-DCL signal of the control port, the value of the nonvolatile memory (setup software), or the setting of the diode current limit potentiometer at the DT 400. The lower half byte of status byte 8 is the high-order part of the 12 bit value.				
,	eflects faults.	x x x x x x x x x x x x x x x x x x x		
Bit 5 E Bit 6 E	B6TL B6DFAIL B6TOUT B6WS	Error bit temperature error. Error bit RS 232 port data fail. Error bit RS 232 port time out. Error bit RS 232 port wrong character received.		
Packet P1 s SA1DCACT 12 bit value, range 0 to 6	resolution 4095 s	diode current actual SA1DCACT Error bits 1 1 1 1 1 1 1 1 1 1 teps, range 0 to 50 A for DT 400-50, increment 1 , increment 14,65 mA. ent.	2,21 mA,	

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc Laser Power Supplies DT 400 Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 \bigcirc The lower half byte of status byte 10 is the high-order part of the 12 bit value. Error bits 4 bit value, reflects faults. The upper half byte of status byte 10 contains the following error bits. EB6HFAIL Bit 4 Error bit hardware. Bit 5 Unused. Bit 6 EB6VL Error bit diode voltage limit exceeded. Bit 7 EB6DECF Error bit data source decoder error. Packet P1 status byte 11 diode voltage SA1DVACT Packet P1 status byte 12 operating state bits SA1DVACT x x x x 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 25 V, increment 6,10501 mV. Reflects the diode voltage. The lower half byte of status byte 12 is the high-order part of the 12 bit value. Operating state bits 4 bit value, reflects operating states. The upper half byte of status byte 12 contains the following operating state bits. SB6PTL Bit 4 TEC temperature is low. SB6PTH TEC temperature is high. Bit 5 Bit 6 SB6SDA Shut down is active. SB6PSONA DT 400 is in on-state. Bit 7 Packet P1 status byte 13 Current Set Point SA3DCSP2 Packet P1 status byte 14 **Operating State bits** SA3DCSP2 x x x x 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Reflects the diode current set point signal at X3 of a control panel. The lower half byte of status byte 14 is the high-order part of the 12 bit value. Not implemented. Operating state bits 4 bit value, reflects operating states. The upper half byte of status byte 14 contains the following operating states bits. Bit 4 SB6PSR Control interface is ready. Bit 5 SB6ILA Safety interlock is active. SB6LOCAL Bit 6 Local mode is active. Bit 7 SB6TILA TEC temperature interlock is active.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mbc Laser Power Supplies DT 400 Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 \bigcirc (0)Packet P1 status byte 15 **TEC Temperature Actual SA1PTACT** Packet P1 status byte 16 Baud rate SD6BR SA1PTACT x x x x 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 °C, increment 0,01221 °C. Reflect the actual TEC temperature. The lower half byte of status byte 16 is the high-order part of the 12 bit value. Baud rate 4 bit value, binary output, range 0 bis 15, reflects the defined baud rate. The upper half byte of status byte 16 contains the following baud rates. Number Baud rate 1200 1 2 2400 3 4800 4 9600 5 19200 38400 6 7 57600 8 115200 Packet P1 status byte 17 **Counter Operating Hours SD6WH** Packet P1 status byte 18 Packet P1 status byte 19 Packet P1 status byte 20 32 bit value, resolution 4294967295 steps, increment 1 second. Reflects the operating time of the system. Operating time in seconds = P1SB20_{dez} * 256³ + P1SB19_{dez} * 256² + P1SB18_{dez} * 256 + P1SB17_{dez} Packet P1 status byte 21 **Counter Operating Hours SD6DWH** Packet P1 status byte 22 Packet P1 status byte 23 Packet P1 status byte 24 32 bit value, resolution 4294967295 steps, increment 1 second. Reflects the operating time of the diodes. Operating time in seconds = $P1SB24_{dez} * 256^3 + P1SB23_{dez} * 256^2 + P1SB22_{dez} * 256 + P1SB21_{dez}$ Packet P1 status byte 25 Stop byte Packet P1 status byte 26 Stop byte For the end of the sequence a stop byte will be send twice. The stop byte must have a hexadecimal value of "0B" or a binary value of "0000 1011".

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 Ó **Description of Packet P2** Packet P2 reflects data from control port and from control panel. Packet P2 status byte 1 Start byte Start byte Packet P2 status byte 2 For starting the sequence a start byte will be send twice. The start byte must have a hexadecimal value of "0A" or a binary value of "0000 1010". Control byte SD6CON Packet P2 status byte 3 8 bit word, binary output, reflects the current operating state. Bit 0 Unused. Bit 1 = 1 SB6RDWH Counter for diode operating hours is reset. SB6PSON DT 400 is in on-state. Bit 2 = 1 Bit 3 Unused. Bit 4 = 1 SB6TSD TEC shut down is active. SB6REBOOT Bit 5 = 1System reboot was triggered. Bit 6 = 1SB6STORE Data are saved. Bit 7 = 1 SB6CPPSON DT 400 is turned on by CD-DCON-signal at the control port. operating state byte SD6OM Packet P2 status byte 4 8 bit word, binary output, reflects the current operating mode. Bit 0 Unused. Bit 1 = 1 SB60MRS RS232 port is used for control. Bit 2 Unused. SB6REM Remote mode is active. Bit 3 = 1 Bit 4 = 1 SB6TSDA TEC shut down is active. Bit 5 Unused. SB6RRS Data were received at RS 232 port. Bit 6 = 1 Bit 7 Unused. Packet P2 status byte 5 data source decoder SD6DEC 8 bit word, binary output, reflects the data source assignments. Bit 1 Bit 0 0 0 The diode current limit value is given by RS 232 port. 0 1 The diode current limit value is given by memory. 0 The diode current limit value is given by control port. 1 Bit 4 Bit 3 Bit 2 The diode current set point is given by RS 232 port. 0 0 0 0 0 1 The diode current set point is given by memory. 0 The diode current set point is given by control port. 0 1 0 0 The diode current set point is given by control panel. 1

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc		Laser Power Supp	lies DT 400
Accessories Control Interfa Software Prote		RS 232 Port	RS232Port
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0	The TEC The TEC The TEC	temperature set point is given by RS 232 port. temperature set point is given by memory. temperature set point is given by control port. temperature set point is given by control panel.	
Different setting	gs lead to a de	coder fault, error bit EB6DECF will be set.	
Packet P2 stat 8 bit word, bina assignments w	ary output, refle	in out control SD6IOC acts the settings of the status bits and defines the 7.	e packet
Bit 1 Bit 2 = 1 SB6	6CPSDE 6SDPOLP 6TCON	Shut down signal of control port approved. Unused. Shut down signal polarity is positive. Temperature interlock control is active. Unused. Unused. Must be 1. Must be 0.	
range 0 to 60 A Reflects the dic The lower half I SD6REV1 4 bit value, rang Reflects the firs The revision nu SD6REV = "SD	tus byte 8 $x \times x \times 1$ solution 4095 s Δ for DT 400-60 ode current limit byte of status t 1001 x ge 0 to 9. st digit of the refin D6REV4" + "SE byte of status	Revision number of firmware, first digit SD 1 1 1 1 1 1 1 1 1 1 steps, range 0 to 50 A for DT 400-50, increment), increment 14,65 mA. It value CA-DCL at the control port. byte 8 is the high-order part of the 12 bit value. x x x x x x x x x x x evision number of the control interface firmware. mware results of: D6REV3" + "SD6REV2" + "SD6REV1" byte 8 is the least significant digit of the revision	12,21 mA,
range 0 to 60 A Reflects the dic	tus byte 10 x x x x 1 solution 4095 s for DT 400-60 ode current limit	Diode Current Limit SD4DCL Revision number of firmware, second digit 1 1 1 1 1 1 1 1 1 1 steps, range 0 to 50 A for DT 400-50, increment 0, increment 14,65 mA. it value from the memory. byte 10 is the high-order part of the 12 bit value.	: 12,21 mA,

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mbc

Accessories

Laser Power Supplies DT 400

RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 Ó SD6REV2 0000 x x x x x x x x x x x x x 4 bit value, range 0 to 9. Reflects the second digit of the revision number of the control interface firmware. The revision number of the firmware results of: SD6REV = "SD6REV4" + "SD6REV3" + "SD6REV2" + "SD6REV1" The upper half byte of status byte 10 is the most significant digit after the dot. Example for a revision number: 01.09 Packet P2 status byte 11 Diode Current Set Point SD2DCSP Packet P2 status byte 12 Revision number of firmware, third digit SD6REV3 SD2DCSP x x x x 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Reflects the diode current set point CA-DCSP at the control port. The lower half byte of status byte 12 is the high-order part of the 12 bit value. SD6REV3 0001 x x x x x x x x x x x x x 4 bit value, range 0 to 9. Reflects the third digit of the revision number of the control interface firmware. The revision number of the firmware results of: SD6REV = "SD6REV4" + "SD6REV3" + "SD6REV2" + "SD6REV1" The upper half byte of status byte 12 is the least significant digit left of the dot. Example for a revision number: 01.09 Packet P2 status byte 13 **Diode Current Set Point SA3DCSP** Packet P2 status byte 14 Revision number of firmware, fourth digit SD6REV4 SA3DCSP xxxx 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Reflects the diode current set point at the control panel. The lower half byte of status byte 14 is the high-order part of the 12 bit value. SD6REV4 0000 x x x x x x x x x x x x x 4 bit value, range 0 to 9. Reflects the fourth digit of the revision number of the control interface firmware. The revision number of the firmware results of: SD6REV = "SD6REV4" + "SD6REV3" + "SD6REV2" + "SD6REV1" The upper half byte of status byte 14 is the most significant digit left of the dot. Example for a revision number: 01.09 Packet P2 status byte 15 Diode Current Set Point in memory SD4DCSP Packet P2 status byte 16 Number of last faults SD6LF SD4DCSP xxxx 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Reflects the diode current set point of the memory. The lower half byte of status byte 16 is the high-order part of the 12 bit value.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc Laser Power Supplies DT 400 Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 Ó SD6LF 4 bit value, range 0 to15. The upper half byte of status byte 16 contains the number of the last faults. Fault number Fault name TEC temperature fault. 1 Decoder error. 2 3 Communication error. 4 RS 232 port data fail. 5 RS 232 port wrong character received. 6 Hardware fail. 7 Diode voltage limit exceeded. TEC Temperature Set Point SA2PTSP Packet P2 status byte 17 Packet P2 status byte 18 SA2PTSP x x x x 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50°C, increment 0,01221°C. Reflects the TEC temperature set point CA-PTSP at the control port. The lower half byte of status byte 18 is the high-order part of the 12 bit value. The high-order half byte of status byte 18 is unused. Packet P2 status byte 19 **TEC Temperature Set Point SA3PTSP** Packet P2 status byte 20 xxxx 1111 1111 1111 SA3PTSP 12 bit value, resolution 4095 steps, range 0 to 50 °C, increment 0,01221 °C. Reflects the TEC temperature set point of the control panel. The lower half byte of status byte 20 is the high-order part of the 12 bit value. The high-order half byte of status byte 20 is unused. Packet P2 status byte 21 **TEC Temperature Set Point SD4PTSP** Packet P2 status byte 22 SD4PTSP xxxx 1111 1111 1111 12 bit value, resolution 4095 steps, range 0 to 50 $^\circ\text{C},$ increment 0,01221 $^\circ\text{C}.$ Reflects the TEC temperature set point stored in the memory. The lower half byte of status byte 22 is the high-order part of the 12 bit value. The high-order half byte of status byte 22 is unused. Packet P2 status byte 23 Data Source Decoder Remote SD4DECREM 8 bit word, binary output, reflects the data source assignments for the remote mode. Bit 1 Bit 0 The diode current limit value is given by RS 232 port. 0 0 0 The diode current limit value is given by memory. 1 The diode current limit value is given by control port. 1 0

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc		Laser Power Supplie	es DT 400	
Accessories Control Interfa Software Prot		RS 232 Port	$\mathbb{RS} 232 \operatorname{Port} \\ \textcircled{O} \\ \textcircled{\circ} \\ \end{array}{} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \end{array}{} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \end{array}{} \\ \textcircled{\circ} \\ \textcircled{\circ} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \end{array}{} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \end{array}{} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \end{array}{} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \end{array}{} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ \end{array}{} \\ \end{array}{} \\ \begin{array}{\circ} \\ \\ \end{array}{} \\ $ \\ } \\ \end{array}{} \\ \end{array}{} \\ \\ } \\ \\ \\ \end{array}{} \\ \end{array}{} \\ \\ } \\ \end{array}{} \\ \\ } \\ \\ \end{array}{} \\ \\ } \\ \\ \\ \end{array}{} \\ \\ } \\ \\ \\ \end{array}{} \\ \\ } \\ \\ \\ \\ \end{array}{} \\ \\ } \\ \\ \\ \\ \end{array} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ } \\ \\	
Packet P2 sta	tus byte 23	Data Source Decoder Remote SD4DECREM		
Bit 4 Bit 3 Bit 2 0 0 0 0 0 1 0 1 0 1 0 0	The diode The diode The diode	e current set point is given by RS 232 port. e current set point is given by memory. e current set point is given by control port. e current set point is given by control panel.		
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0	The TEC The TEC The TEC	temperature set point is given by RS 232 port. temperature set point is given by memory. temperature set point is given by control port. temperature set point is given by control panel.		
Different settin	gs lead to a de	coder fault, error bit EB6DECF will be set.		
Packet P2 sta 8 bit value, bin		In Out Control Remote SD4IOCREM ects assignments for the remote mode.		
Bit 0 = 1 SB Bit 1 Bit 2 = X Bit 3 = X Bit 4 = X Bit 5 = X Bit 6 = X Bit 7 = X	4SDCPER	Shut Down signal of control port approved. Unused Irrelevant. Irrelevant. Irrelevant. Irrelevant. Irrelevant. Irrelevant. Irrelevant.		
	tus byte 26 the sequence a	Stop byte Stop byte a stop byte will be send twice. exadecimal value of "0B" or a binary value of "0000) 1011".	
Description of the packet P3 The packet P3 contains the data stored in the memory of the control interface.				
	tus byte 2 e sequence a s	Start byte Start byte tart byte will be send twice. exadecimal value of "0A" or a binary value of "0000) 1010".	

mpc		Laser Power Supplies	s DT 400		
Accessories Control Interf Software Prot	ace 10228003, tocol		RS 232 Port		
Packet P3 sta 8 bit word, bina		Control Byte SD6CON ects the operating state.			
Bit 2 = 1 SB Bit 3 Bit 4 = 1 SB Bit 5 = 1 SB Bit 6 = 1 SB	6RDWH 6PSON 6TSD 6REBOOT 6STORE 6CPPSON	Unused. Counter for diode operating hours is resetted. DT 400 is in on-state. Unused. TEC shut down is active. System reboot was triggered. Data are saved. DT 400 is turned on by CD-DCON-signal at the con	itrol port.		
Packet P4 sta 8 bit word, bina		Operating State Byte SD6OM ects the current operating mode.			
Bit 2 Bit 3 = 1 SB Bit 4 = 1 SB Bit 5	60MRS 6REM 6TSDA 6RRS	Unused. RS232 port is used for control. Unused. Remote mode is active. TEC shut down is active. Unused. Data were received at RS 232 port. Unused.			
Packet P3 sta 8 bit word, bina		Data Source Decoder SD6DEC ects the data source assignments.			
Bit 1 Bit 0 0 0 0 1 1 0	The diod	e current limit value is given by RS 232 port. e current limit value is given by memory. e current limit value is given by control port.			
Bit 4 Bit 3 Bit 2 0 0 0 0 0 1 0 1 0 1 0 0	The diode The diode The diode	e current set point is given by RS 232 port. e current set point is given by memory. e current set point is given by control port. e current set point is given by control panel.			
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0 Different settin	The TEC The TEC The TEC The TEC	temperature set point is given by RS 232 port. temperature set point is given by memory. temperature set point is given by control port. temperature set point is given by control panel. coder fault, error bit EB6DECF will be set.			

mpc	Laser Power Supp	olies DT 400	
Accessories Control Interface 10228003, Software Protocol	RS 232 Port	$\mathbb{RS} 232 \operatorname{Port}_{\bigcirc \bigcirc \circ \circ \circ \circ \circ } \bigcirc \bigcirc$	
Packet P3 status byte 6 8 bit word, binary output, refle assignments with bit 6 and bit	In Out Control SD6IOC cts the settings of the status bits and defines th 7.	he packet	
Bit 0 = 1 SB6CPSDE Bit 1 Bit 2 = 1 SB6SDPOLP Bit 3 = 1 SB6TCON Bit 4 Bit 5 Bit 6 = 0 Bit 7 = 1	Shut down signal of control port approved. Unused. Shut down signal polarity is positive. Temperature interlock control is active. Unused. Unused. Must be 0. Must be 1.		
Reflects the serial number of			
Reflects the time which may p error bit EB6TOUT will be set	Time Out RS 232 Port SD4TOUT steps, range 0 to 655,3 s, increment 100 ms. bass till receiving the next data. An overrun lead and the diode current will be turned off. tive if control by RS 232 port is active. er part of the 16 bit value.	ds to a time out error,	
range 0 to 60 A for DT 400-60 Reflects the diode current set	point stored in the memory. byte 12 is the high-order part of 12 bit value.	it 12,21 mA,	
range 0 to 60 A for DT 400-60 Reflects the diode current limi	t value stored in the memory. byte 14 is the high-order part of the 12 bit value		

mpc		Laser Power Supplies	DT 400
Accessories Control Interf Software Prot	ace 10228003, RS 232 Po cocol	ort	RS 232 Port
Reflects the TI The lower half	tus byte 16 x x x x 1 solution 4095 steps, rang EC temperature set point s	he high-order part of the 12 bit value.	
Reflects the TI The lower half	tus byte 18 x x x x 1 solution 4095 steps, rang EC temperature interlock v	perature Interlock SD4PTL 1 1 1 1 1 1 1 1 1 e 0 to 50 °C, increment 0,01221 °C. value stored in the memory. he high-order part of the 12 bit value. unused.	
Reflects the di The lower half	tus byte 20 x x x x 1 solution 4095 steps, rang ode voltage limit value sto	he high-order part of the 12 bit value.	
Reflects the tir leads to a time	i tus byte 22 1 1 1 1 1 solution 65535 steps, rang ne which may pass till a te	Temperature Control SD4TOTC 1111111111 ge 0 to 655,3 s, increment 100 ms. emperature interlock event leads to an erro DTC will be set and the diode current will b he 16 bit word.	
Packet P3 sta 8 bit word, bina	-	rce Decoder Local SD6DECLOC a source assignments in the local mode.	
Bit 1 Bit 0 0 0 0 1 1 0	The diode current lir	nit value is given by RS 232 port. nit value is given by memory. nit value is given by control port.	
Bit 4 Bit 3 Bit 2 0 0 0 0 0 1 0 1 0 1 0 0	The diode current se The diode current se The diode current se	et point is given by RS 232 port. et point is given by memory. et point is given by control port. et point is given by control panel.	

mpc		Laser Power Supplie	es DT 400
Accessories Control Interfa Software Prote		RS 232 Port	RS 232 Port
Packet P3 stat	tus byte 23	Data Source Decoder Local SD6DECLOC	
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0	The TEC The TEC The TEC The TEC	temperature set point is given by RS 232 port. temperature set point is given by memory. temperature set point is given by control port. temperature set point is given by control panel.	
Packet P2 stat	tus byte 24	In Out Control Remote SD4IOCLOC	
8 bit value, binary output, reflects assignments for		Unused. Unused. Unused. Unused. Unused. Unused. Stop byte Stop byte a stop byte will be send twice.	0 1011".

Laser Power Supplies DT 400

Accessories

Control Interface 10228003, RS 232 Port Software Protocol



Received data

The system will be controlled by the control data set.

For safety reasons a connection supervision is implemented.

If the control interface doesn't receive data within a specific time, error bit EB6TOUT is set and the diode current is turned off.

For the connection supervision it is sufficient to generate the required data traffic by using a short control data set instead of the normal control data set. The short data set can be used if the fully functional range is not required.

For configuring the control interface, the configuration data set is used.

Overview

Byte 1 Byte 2 Byte 3 Byte 4 Byte 5 Byte 6 Byte 7 Byte 8 Byte 9 Byte 10 Byte 11 Byte 12 Byte 13 Byte 13 Byte 14 Byte 15 Byte 15 Byte 16 Byte 17 Byte 18 Byte 20 Byte 20 Byte 21 Byte 22 Byte 23 Byte 24	Control data set Start byte CD5CON SD6OM CD5DEC CD5IOC CD5TOUT CD5DCL CD5DCSP CD5PTSP Stop byte Stop byte	Short control data set Start byte CD5CON SD6OM CD5DEC CD5IOC Stop byte Stop byte	Configuration data set Start byte CD5CON SD6COM CD5DEC CD5IOC CF5TOTC CF5DCSP CF5DCL CF5PTSP CF5PTL CF5DVL CF5DVL CF5DECLOC CF5IOCLOC CF5IOCLOC CF5IOCLOC CF5IOCLOC CF5IOCCEM Stop byte Stop byte	
---	---	--	--	--

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

(O

Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 0 Control data set A control data set consists of: Start of data set 2 byte Control data 12 byte End of data set 2 byte Byte 1 Start byte Byte 2 Start byte For starting the sequence a start byte must be send twice. The start byte must have a hexadecimal value of "0A" or a binary value of "0000 1010". Control Byte CD5CON Byte 3 8 bit word, binary input. Bit 0 Unused. Bit 1 = 1 CB5RDWH Resets the counter for the diode operating hours. Bit 2 = 1 CB5PSON Turns the DT 400 on. Bit 3 Unused. Bit 4 = 1 CB5TSD Activates TEC shut down. Bit 5 = 1 CB5REBOOT Reboots system. Bit 6 = 0CB5STORE Must be 0. Bit 7 = 1 SB6CPPSON Unused. **Operating State SD6OM** Byte 4 8 bit word, binary input, unused. Byte 5 Data Source Decoder CD5DEC 8 bit word, binary input, defines the data source assignments for the RS 232 mode. Bit 1 Bit 0 0 The diode current limit value is given by RS 232 port. 0 0 The diode current limit value is given by memory. 1 0 The diode current limit value is given by control port. 1 Bit 4 Bit 3 Bit 2 The diode current set point is given by RS 232 port. 0 0 0 0 0 The diode current set point is given by memory. 1 0 1 0 The diode current set point is given by control port. 0 0 The diode current set point is given by control panel. 1 Bit 7 Bit 6 Bit 5 The TEC temperature set point is given by RS 232 port. 0 0 0 0 0 1 The TEC temperature set point is given by memory. 0 0 The TEC temperature set point is given by control port. 1 0 0 The TEC temperature set point is given by control panel. 1 Different settings lead to a decoder fault, error bit EB6DECF will be set.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc Laser Power Supplies DT 400 Accessories RS 232 Port Control Interface 10228003, RS 232 Port Software Protocol 0 0 0 0 0 0 0 0 0 0 Byte 6 In Out Control CD5IOC 8 bit word, binary input, defines settings. Bit 0 = 1 CB5SDCPE Enables CD-DCSD signal of Control Port for shut downing. Unused. Bit 1 Bit 2 Unused. Unused. Bit 3 Must be 0. Bit 4 = 0Bit 5 = 0Must be 0. Bit 6 Unused. Bit 7 Unused Time Out RS 232 Port CD5TOUT Byte 7 Byte 8 16 bit value, resolution 65535 steps, range 0 to 655,3 s, increment 100 ms. Defines the time which may pass till receiving the next data. An overrun leads to a time out error, error bit EB6TOUT will be set and the diode current will be turned off. The time out control is only active if control by RS 232 port is active. Byte 8 is the high-order part of the 16 bit value. Diode Current Limit CD5DCL Byte 9 Byte 10 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Defines the diode current limit value for the RS 232 control mode. The value is valid if RS 232 is selected as a data source for the diode current limit value. Byte 11 **Diode Current Set Point CD5DCSP** Byte 12 12 bit value, resolution 4095 steps, range 0 to 50 A for DT 400-50, increment 12,21 mA, range 0 to 60 A for DT 400-60, increment 14,65 mA. Defines the diode current set point for the RS 232 control mode. The value is valid if RS 232 is selected as a data source for the diode current set point. Byte 13 **TEC Temperature Set Point CD5PTSP** Byte 14 12 bit value, resolution 4095 steps, range 0 to 50 °C, increment 0,01221 °C. Defines the TEC temperature set point for the RS 232 control mode. The value is valid if RS 232 is selected as a data source for the TEC temperature set point. Byte 15 Stop byte Byte 16 Stop byte For the end of the sequence a stop byte must be send twice. The stop byte must have a hexadecimal value of "0B" or a binary value of "0000 1011".

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

Laser Power Supplies DT 400

Accessories RS 232 Port Control Interface 10228003, RS 232 Port 0 0 0 0 0 0 0 0 0 Software Protocol 0 Short Control data set A short control data set consists of: Start of data set 2 byte Control data 4 byte End of data set 2 byte Byte 1 Start byte Start byte Byte 2 For starting the sequence a start byte must be send twice. The start byte must have a hexadecimal value of "0A" or a binary value of "0000 1010". Byte 3 Control Byte CD5CON 8 bit word, binary input. Bit 0 Unused. Bit 1 = 1 CB5RDWH Resets the counter for the diode operating hours. Bit 2 = 0 CB5PSON Turns the DT 400 on. Unused. Bit 3 Bit 4 = 1 CB5TSD Activates TEC shut down. Bit 5 = 1 CB5REBOOT Reboots system. Bit 6 = 0 CB5STORE Must be 0. Bit 7 Unused. **Operating State SD6OM** Byte 4 8 bit word, binary input, unused. Byte 5 Data Source Decoder CD5DEC 8 bit word, binary input, unused. In Out Control CD5IOC Byte 6 8 bit word, binary input, defines settings. Bit 0 Unused. Bit 1 Unused. Bit 2 Unused. Unused. Bit 3 Bit 4 = 1 Must be 1. Bit 5 = 1 Must be 1. Bit 6 Unused. Bit 7 Unused. Byte 7 Stop byte Byte 8 Stop byte For the end of the sequence a stop byte must be send twice. The stop byte must have a hexadecimal value of "0B" or a binary value of "0000 1011".

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

(mpc

Laser Power Supplies DT 400

Accessories Control Interface 10228003, RS 232 Port Software Protocol



Configuration Data Set

A configuration data set consists of: Start of data set 2 byte Configuration data 20 byte End of data set 2 byte Byte 1 Start Byte Start Byte Byte 2 For the opening of the sequence a start byte must be send twice. The start byte must have a hexadecimal value of "0A" or a binary value of "0000 1010". Byte 3 Control Byte CD5CON 8 bit word, binary input. Bit 0 Unused. Bit 1 Unused. Must be 0. Bit 2 = 0 CB5PSON Bit 3 Unused. Unused. Bit 4 Bit 5 Unused. Bit 6 = 1 CB5STORE Must be 1. Bit 7 Unused. Byte 4 **Operating State SD6OM** 8 bit word, binary input, unused. Byte 5 Data Source Decoder CD5DEC 8 bit word, binary input, unused. Byte 6 In Out Control CD5IOC 8 bit word, binary input, defines settings. Bit 0 Unused. Bit 1 Unused. Bit 2 Unused. Bit 3 Unused. Bit 4 = 1 Must be 1. Bit 5 = 0 Must be 0. Bit 6 Unused. Bit 7 Unused.

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu

mpc	Laser Power Sup	plies DT 400
Accessories Control Interfa Software Prote	ace 10228003, RS 232 Port ocol	$\mathbb{RS} 232 \operatorname{Port}_{\bigcirc \textcircled{\circ} \circ \circ \circ \circ} \bigcirc$
Defines the tim leads to a time	Time Out Temperature Control CF5TOTC 111111111111111 solution 65535 steps, range 0 to 655,3 s, increment 100 ms. he which may pass till a temperature interlock event leads to out error, error bit EB6TOTC will be set and the diode curre is the high-order part of the 16 bit word.	
range 0 to 60 A Defines the dio The value is va The lower half	Diode Current Set Point CF5DCSP x x x x 1111111111 solution 4095 steps, range 0 to 50 A for DT 400-50, increment A for DT 400-60, increment 14,65 mA. de current set point which will be stored in the memory. and if memory is selected as a data source for the diode current byte of byte 10 is the high-order part of the 12 bit value. byte of byte 10 is unused.	
range 0 to 60 A Defines the dio The value is va The lower half	Diode Current Limit CF5DCL $x \times x \times 111111111111$ solution 4095 steps, range 0 to 50 A for DT 400-50, increment A for DT 400-60, increment 14,65 mA. de current limit value which will be stored in the memory. Idid if memory is selected as a data source for the diode current byte of byte 12 is the high-order part of the 12 bit value. byte of byte 12 is unused.	
Defines the TE The value is va The lower half	TEC Temperature Set Point CF5PTSP $x \times x \times 11111111111$ solution 4095 steps, range 0 to 50 °C, increment 0,01221 °C C temperature set point which will be stored in the memory. solution if memory is selected as a data source for the TEC temp byte of byte 14 is the high-order part of the 12 bit value. byte of byte 14 is unused.	
Defines the TE The lower half	TEC Temperature Interlock Limit CF5PTL x x x x 1111 1111 1111 solution 4095 steps, range 0 to 50 °C, increment 0,01221 °C C temperature interlock limit value which will be stored in the byte of byte 16 is the high-order part of the 12 bit value. byte of byte 16 is unused.	

mpc	Lase	r Power Supplies	DT 400
Accessories Control Interfac Software Protoc	e 10228003, RS 232 Port col	F	RS 232 Port
Defines the diode The lower half by	Diode Voltage Limit CF5DVL $x \times x \times 111111111$ Jution 4095 steps, range 0 to 25 V, inc e voltage limit value which will be store te of byte 18 is the high-order part of the tre of byte 18 is unused.	rement 6,105 01 mV. d in the memory.	
Byte 19 8 bit word, binary	Data Source Decoder Local Mod input, defines the data source assign		
Bit 1 Bit 0 0 0 0 1 1 0	The diode current limit value is give The diode current limit value is give The diode current limit value is give	en by memory.	
Bit 4 Bit 3 Bit 2 0 0 0 0 0 1 0 1 0 1 0 0	The diode current set point is giver The diode current set point is giver The diode current set point is giver The diode current set point is giver	n by memory. n by control port.	
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0	The TEC temperature set point is g The TEC temperature set point is g The TEC temperature set point is g The TEC temperature set point is g	iven by memory. jiven by control port.	
Different settings	lead to a decoder fault, error bit EB6D	ECF will be set.	
Byte 20 8 bit word, binary	In Out Control Local Mode CF5I input, defines settings for the local mo		
Bit 0 = 1 CB6S Bit 1 Bit 2 Bit 3 Bit 4 Bit 5 Bit 6 Bit 7	DCPEL Shut down signal of cont Unused. Unused. Unused. Unused. Unused. Unused. Unused. Unused. Unused.	rol port approved.	

mpc	Laser Power Supplies	DT 400
Accessories Control Interfa Software Proto	ace 10228003, RS 232 Port	S 232 Port
Byte 21 8 bit word, bina	Data Source Decoder Remote Mode CF5DECREM ary input, defines the data source assignments for the remote mode.	
Bit 1 Bit 0 0 0 0 1 1 0	The diode current limit value is given by RS 232 port. The diode current limit value is given by memory. The diode current limit value is given by control port.	
Bit 4 Bit 3 Bit 2 0 0 0 0 0 1 0 1 0 1 0 0	The diode current set point is given by RS 232 port.	
Bit 7 Bit 6 Bit 5 0 0 0 0 0 1 0 1 0 1 0 0	The TEC temperature set point is given by RS 232 port.	
Different setting	gs lead to a decoder fault, error bit EB6DECF will be set.	
Byte 22 8 bit word, bina	In Out Control Remote Mode CF5IOCREM ary input, defines settings for the remote mode.	
Bit 0 = 1 CB6 Bit 1 Bit 2 Bit 3 Bit 4 Bit 5 Bit 6 Bit 7	6SDCPER Shut down signal of control port approved. Unused. Unused. Unused. Unused. Unused. Unused. Unused. Unused. Unused.	
	Stop Byte Stop Byte the sequence a stop byte must be send twice. must have a hexadecimal value of "0B" or a binary value of "0000 1011	".

Laser Power Supplies DT 400

Ordering information	
Device	Identification number
DT 400-50 DT 400-60 D 400-50 D 400-60 Power Supply 24 V-500 W Interlock Unit Interlock Unit FP (fast pulsing) Control Interface Control Panel Control Panel Control Panel Control Panel Control Panel Control Panel Control Panel Control Panel Control Panel Temperature Sensor Heat Sink Printed Circuit Board for Heat Sink 105008 Mounting Kit Mounting Kit Mounting Kit Mounting Kit Ribbon Cable Ribbon Cable Ribbon Cable Ribbon Cable Ribbon Cable	10100232 10100233 10100234 10100235 10870022 10228002 10228003 10227011 10227012 10227013 10227014 10227015 10227016 10227016 10227017 10227018 10360254 10500882 10228005 10228005 10228005 10228007 10228008 10385338 10385359 10385361 10385361 10385361 10385363
Messtec Power Converter GmbH Grube 41 D-82377 Penzberg Phone +49 (0) 8856-80306-0 Fax +49 (0) 8856-9998 messtec@powerconverter.eu www.powerconverter.eu www.laserdriver.eu	
Technical subject to change without notice.	Printed in Germany

Release 1.0 2007 © Messtec Power Converter GmbH www.laserdriver.eu